


FUSE BOX 1

1. 3A ENGINE CHARGE	2. 3A DEPTH SENSOR ADVERTISSEUR RECHARGEUR	3. 3A DEPTH SENSOR RECHARGEUR	4. 3A FUEL LEVEL NIVEAU ESSENCE	5. 7.5A VTS	6. 10A FUEL PUMP POMPE ESSENCE
7. 10A CYL1	8. 10A CYL2	9. 10A CYL3	+12 VOLTS		
10. 3A T.O.P.S	11. 15A DUAL TOOL COUTIL DUAL	COMMUNICATION (CAN HI)		12. 50.0Ω FUEL LEVEL NIVEAU ESSENCE	
13. 10A ENGINE RELAY RELAIS DEL.	14. 3A 2.5 F 5.2 A.C	COMMUNICATION (CAN LOW)		FUEL LEVEL NIVEAU ESSENCE	

FUSE BOX 2

15. 30A CHARGE RELAIS	16. 30A BATT.
+12 VOLTS	

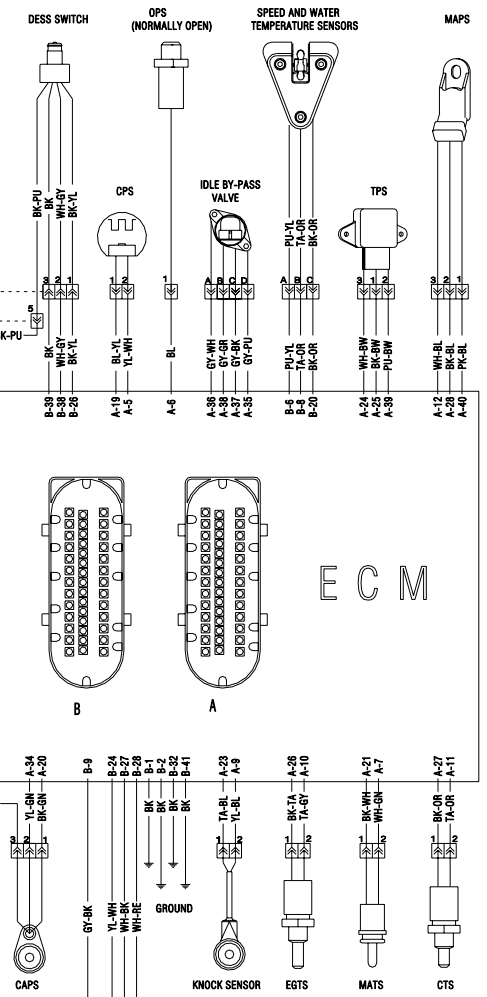

COLOR CODE

WH = WHITE	BK = BLACK
RE = RED	YL = YELLOW
PU = PURPLE	TA = TAN
GN = GREEN	BW = BROWN
GY = GREY	BL = BLUE
PK = PINK	OR = ORANGE