


2010 Sea-Doo RXP/GTI/WAKE

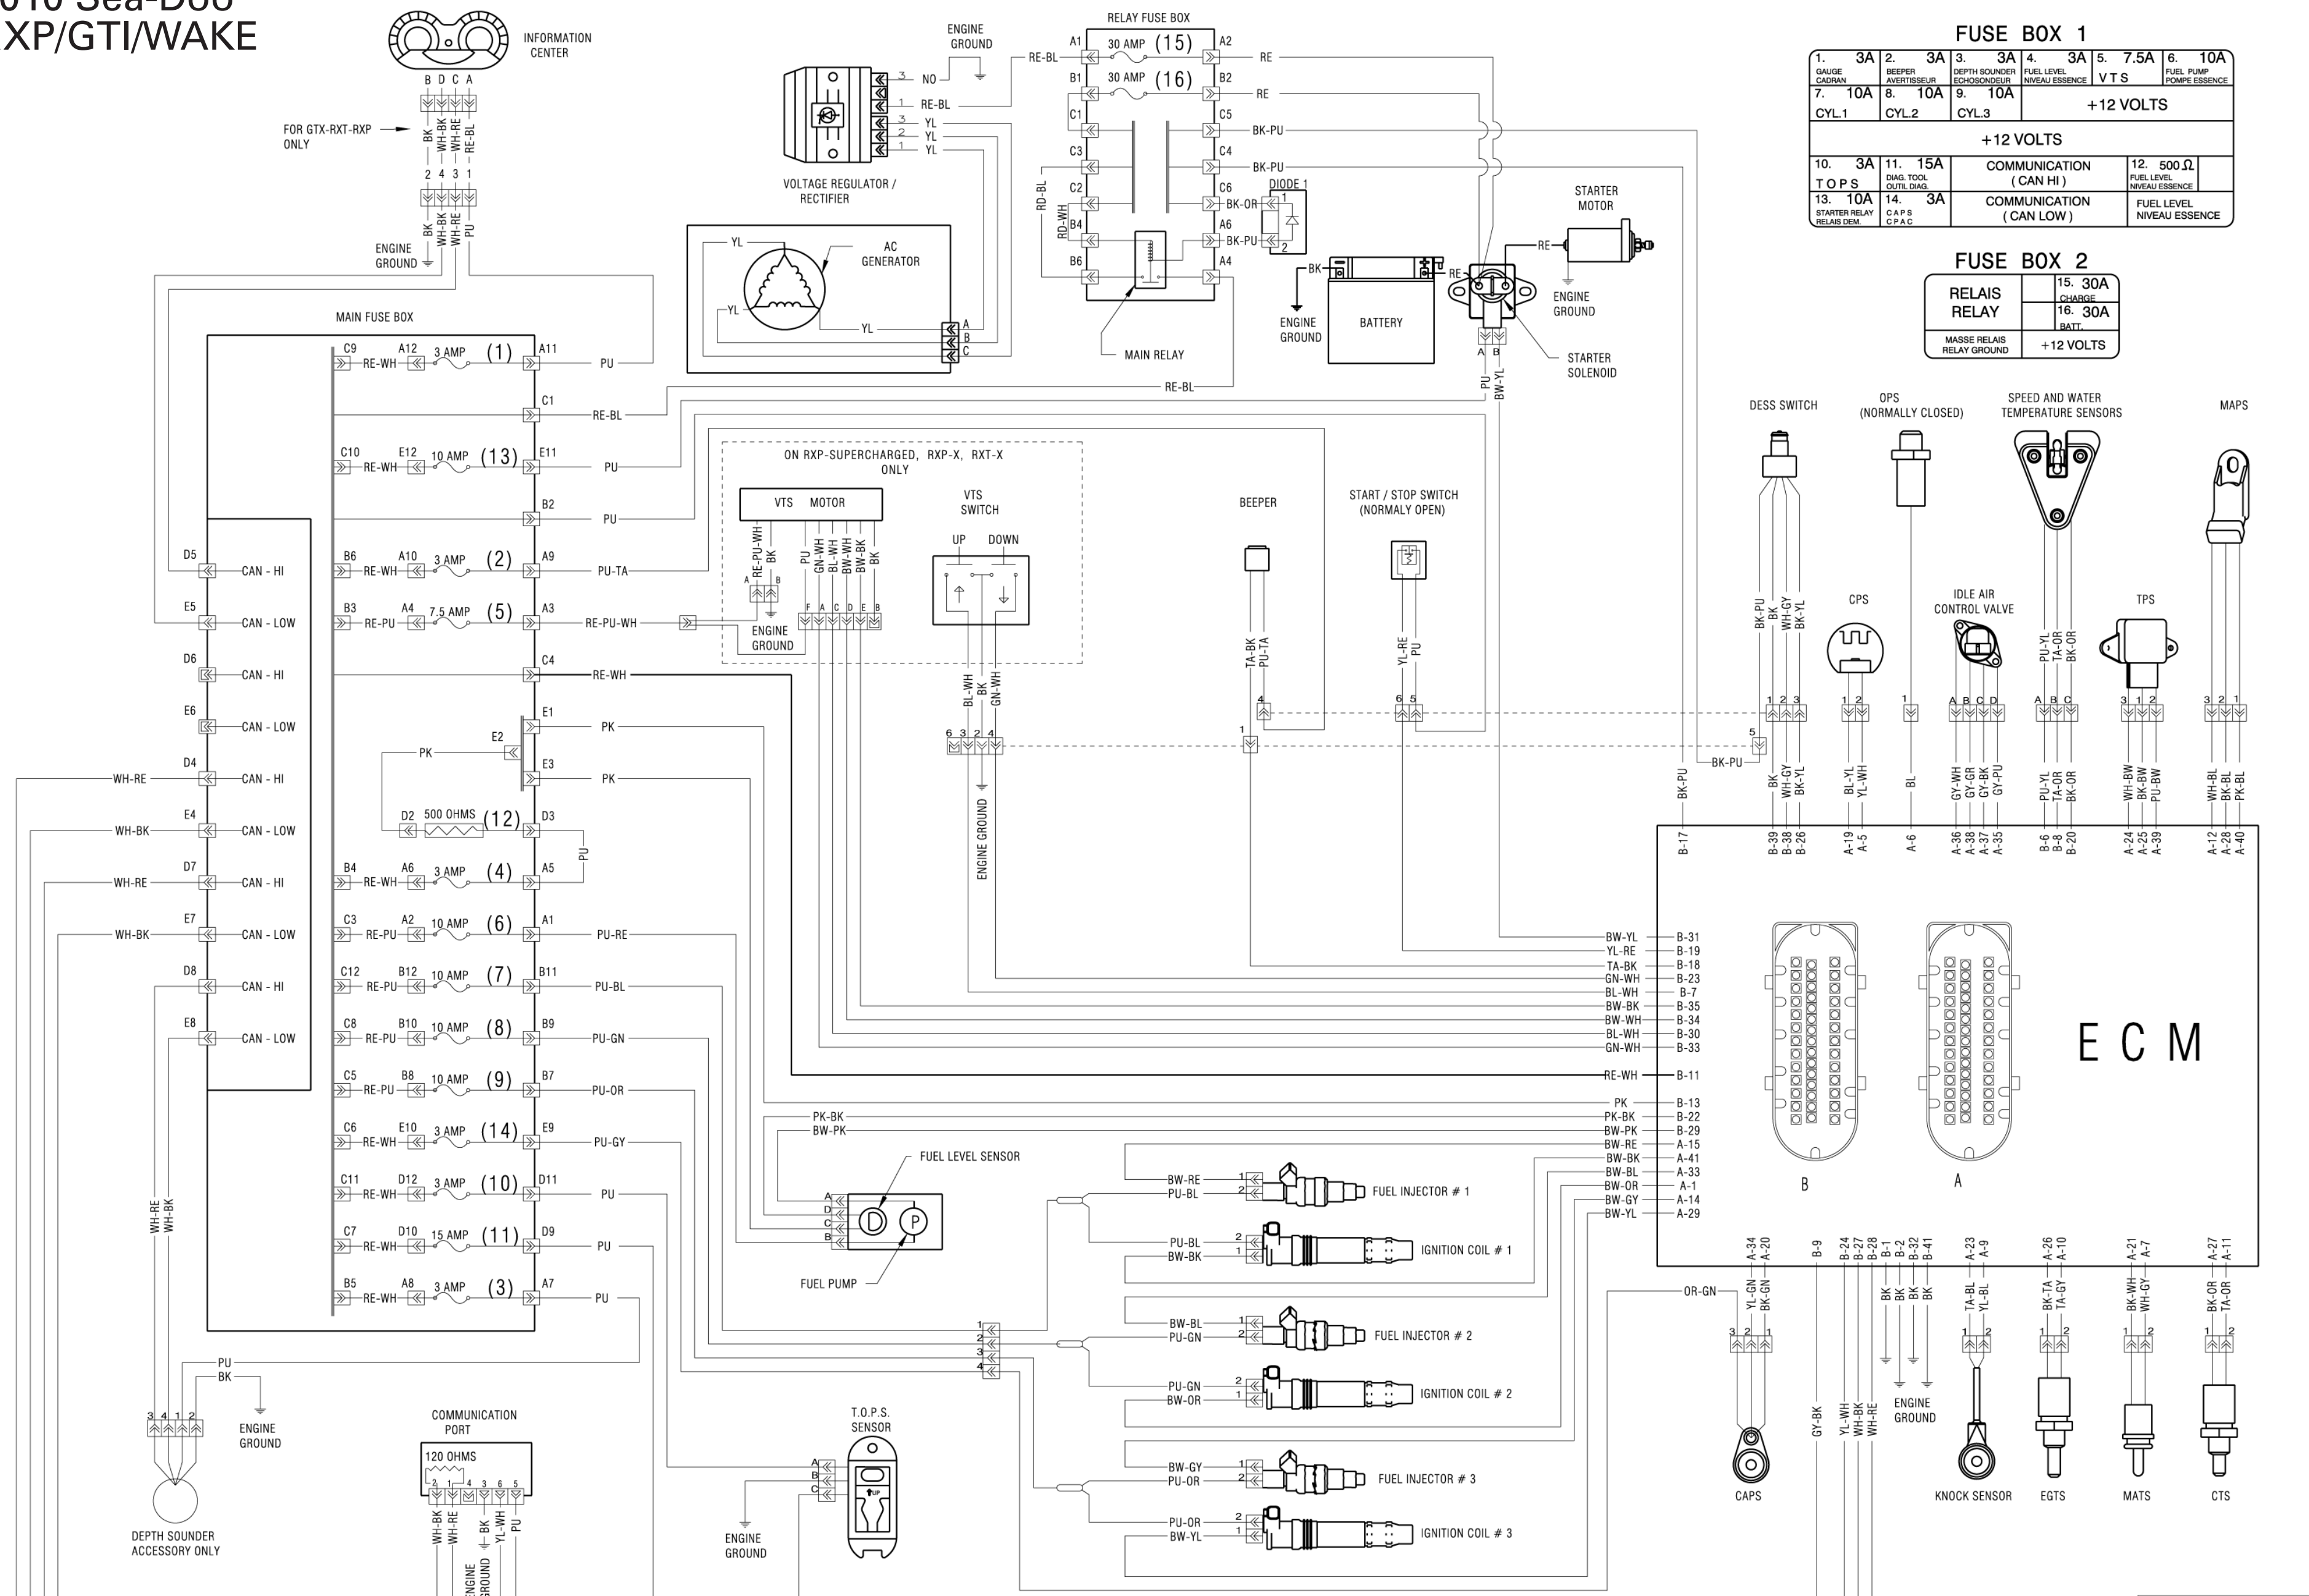


FUSE BOX 1

1. 3A	2. 3A	3. 3A	4. 3A	5. 7.5A	6. 10A
GAUGE CADRAN	BEEPER AVERTISSEUR	DEPTH SOUNDER ECHOSONDEUR	FUEL LEVEL NIVEAU ESSENCE	VTS	FUEL PUMP POMPE ESSENCE
7. 10A	8. 10A	9. 10A	+12 VOLTS		
CYL.1 CYL.2 CYL.3					
+12 VOLTS					
10. 3A	11. 15A	COMMUNICATION (CAN HI)		12. 500Ω	
T O P S		DIAG. TOOL DOUTE DIAG.		FUEL LEVEL NIVEAU ESSENCE	
13. 10A	14. 3A	COMMUNICATION (CAN LOW)		FUEL LEVEL NIVEAU ESSENCE	
STARTER RELAY RELAIS DEM.		C A P S		G P A C	

FUSE BOX 2

RELAIS RELAY	15. 30A CHARGE
	16. 30A BATT.
MASSE RELAIS RELAY GROUND	+12 VOLTS

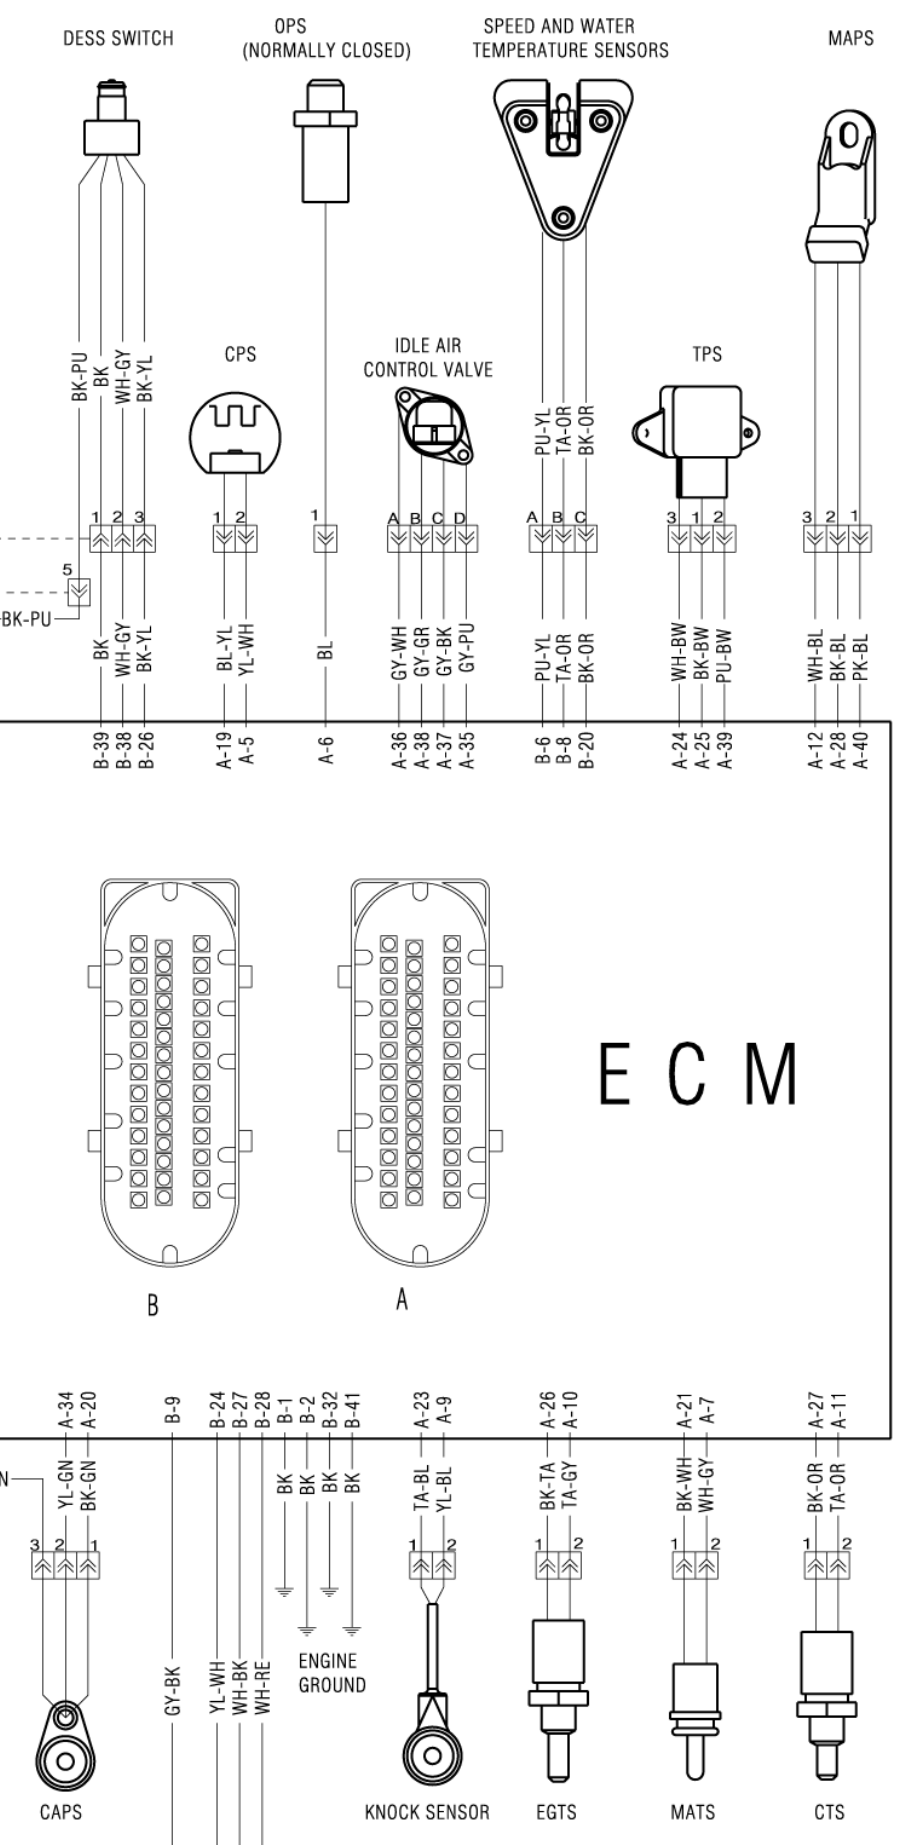

COLOR CODE

WH = WHITE	BK = BLACK
RE = RED	YL = YELLOW
PU = PURPLE	TA = TAN
GN = GREEN	BW = BROWN
GY = GREY	BL = BLUE
PK = PINK	OR = ORANGE