 



2011 SEA-DOO
4-TEC SERIES
GTS PRO / RXP-X



INFORMATION CENTER

FOR RXP-X ONLY



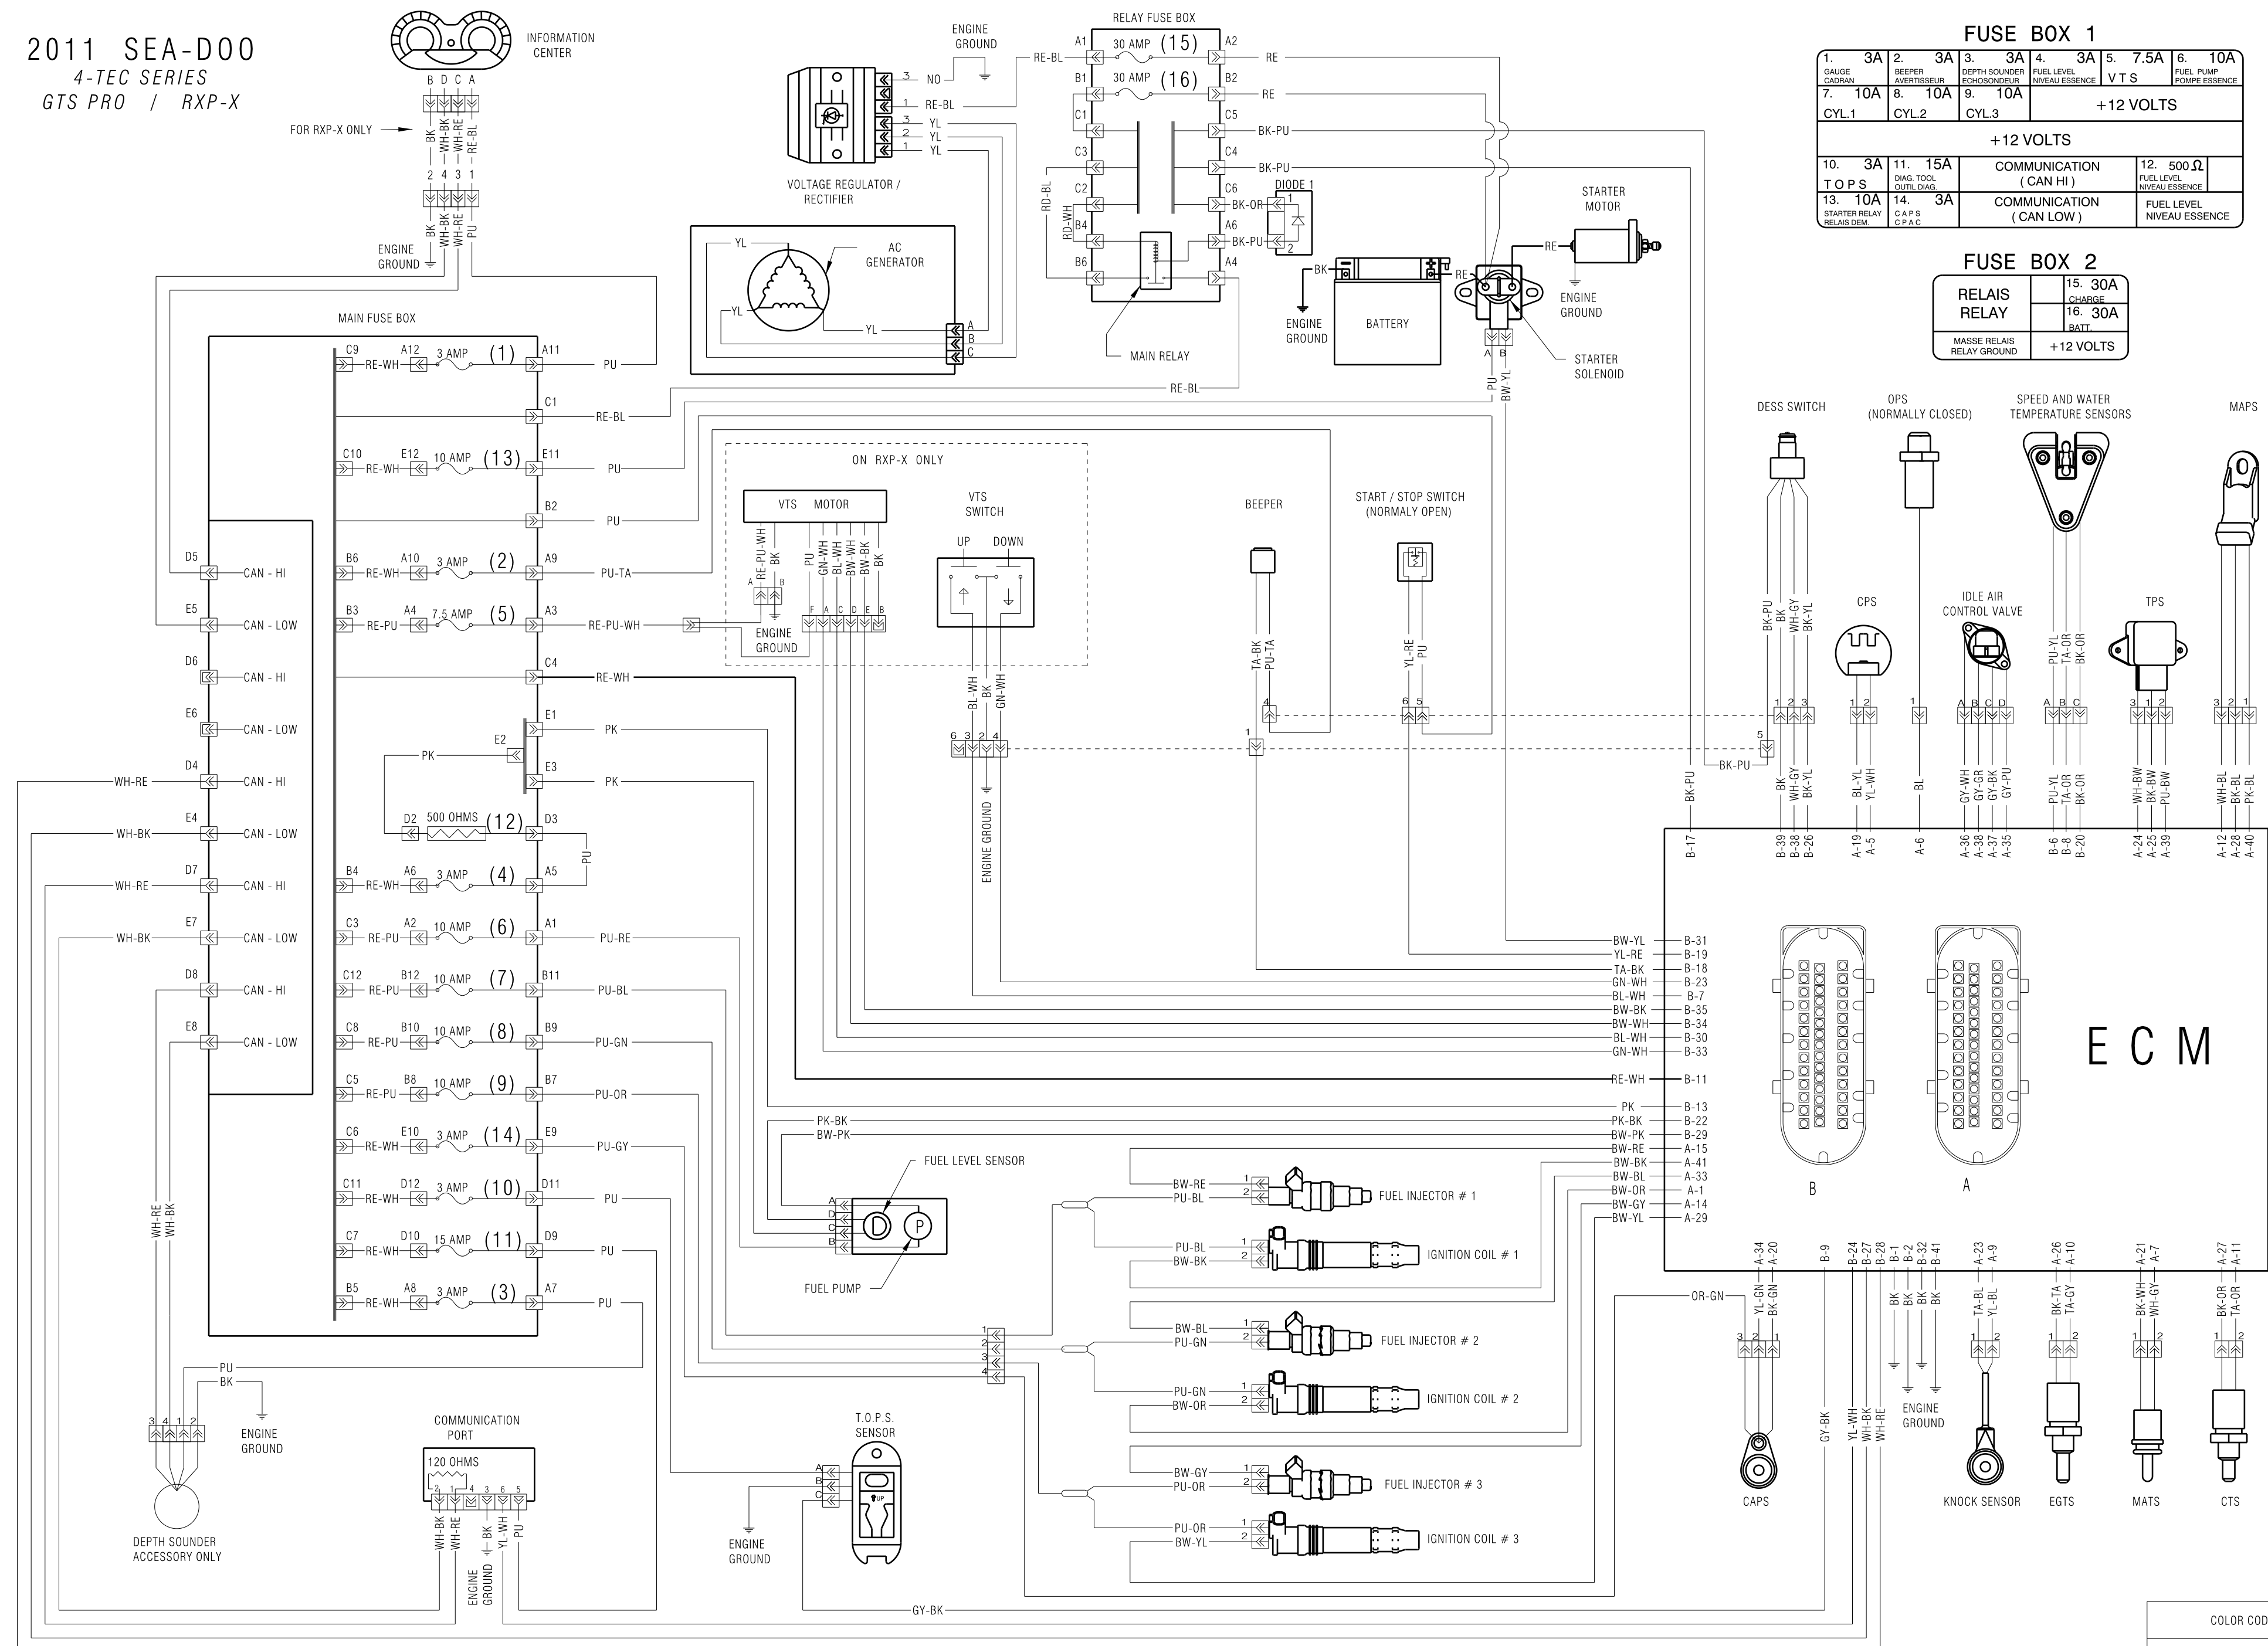


FUSE BOX 1

1. 3A GAUGE CADRAN	2. 3A BEEPER AVERTISSEUR	3. 3A DEPTH SOUNDER ECHOSONDEUR	4. 3A FUEL LEVEL NIVEAU ESSENCE	5. 7.5A VTS	6. 10A FUEL PUMP POMPE ESSENCE
7. 10A CYL.1	8. 10A CYL.2	9. 10A CYL.3	+12 VOLTS		
+12 VOLTS					
10. 3A TOPS	11. 15A DIAG. TOOL OUTIL DIAG.	COMMUNICATION (CAN HI)		12. 500Ω FUEL LEVEL NIVEAU ESSENCE	
13. 10A STARTER RELAY RELAIS DEM.	14. 3A CAPS C.P.A.C.	COMMUNICATION (CAN LOW)		FUEL LEVEL NIVEAU ESSENCE	

FUSE BOX 2

RELAIS RELAY	15. 30A CHARGE
MASSE RELAIS RELAIS GROUND	16. 30A BATT.
+12 VOLTS	

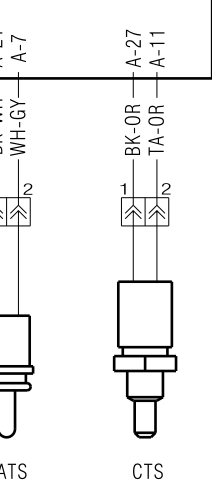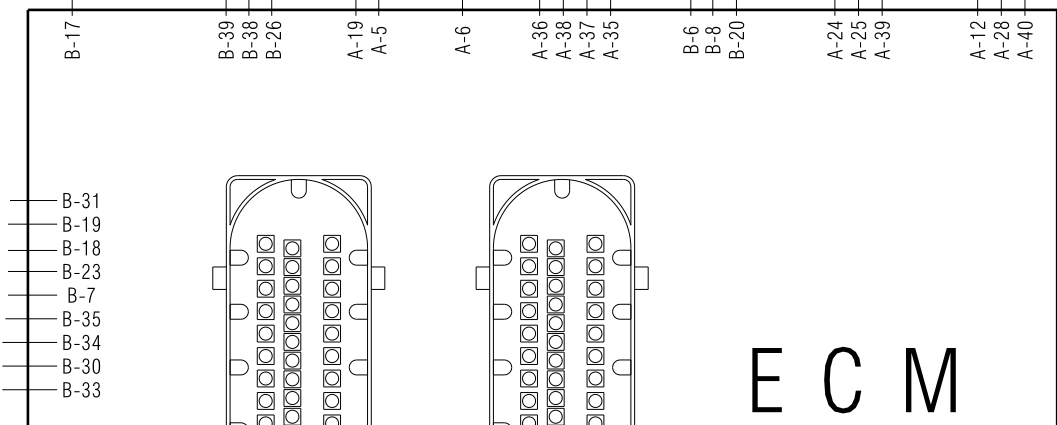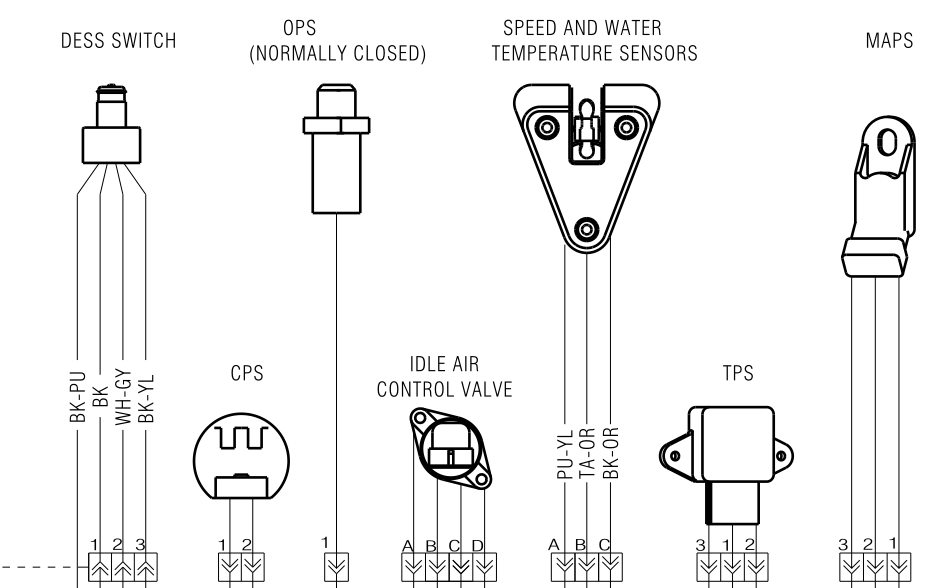

COLOR CODE

WH = WHITE	BK = BLACK
RE = RED	YL = YELLOW
PU = PURPLE	TA = TAN
GN = GREEN	BW = BROWN
GY = GREY	BL = BLUE
PK = PINK	OR = ORANGE