




ROADSTER
PREDELIVERY
 Bulletin

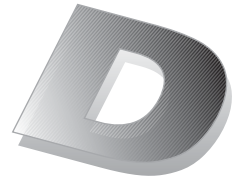

October 09, 2013

Subject: **Can-Am™ Spyder™ ST Predelivery Inspection**

No. **2014-3**

YEAR	MODEL	MODEL NUMBER	SERIAL NUMBER
2014	Spyder ST Series	Refer to table on next pages for complete listing	All

TABLE OF CONTENTS

	Page		Page
IMPORTANT NOTICE	2	FLUIDS	26
UPDATE SUMMARY	3	General Guidelines	26
MODEL LISTING	4	Fuel	26
UNCRATING	5	Clutch Fluid (SM5 Model)	27
Crate Cover Removal	5	Engine Coolant.....	28
Parts and Sub-crate Removal	5	Coolant Level Verification	28
Parts Check.....	7	Brake Fluid.....	29
Lifting the Front of Vehicle	7	Engine Oil.....	30
Front Wheels Installation	9	SETUP	32
Vehicle Removal	10	Guidelines	32
PARTS TO BE INSTALLED	11	Tire Pressure	32
Front Cargo Module.....	11	Drive Belt	32
Battery	16	Clutch Lever.....	34
AAPTS (Ambient Air Pressure and Temperature Sensor) Installation	17	Lights.....	34
Low Beam Headlight Connection	18	B.U.D.S. Programming.....	36
Horn Connection.....	18	Clock and Language Setting	38
Latch Release Cable, Front Storage Compartment Cover	18	ASSEMBLY INSPECTION	39
Diagnostic Link Cable (DLC)	19	FINAL INSPECTION	39
Body Parts Installation	19	Vehicle Test Run	39
Front Fenders	20	Vehicle Cleaning	40
Windshield.....	22	Delivery to Customer	41
Rear Fender	23		
Antenna (LTD Model Only)	25		
Hang Tag and Safety Labels	25		
Licence Plate Installation	26		
Accessories Installation.....	26		
Vehicle Decals.....	26		

IMPORTANT NOTICE

This bulletin must be used in conjunction with the check list enclosed in the bag with the *OPERATOR'S GUIDE*. Make sure that Spyder roadster *PRE DELIVERY CHECK LIST* is completed and signed.

WARNING

To obtain warranty coverage, predelivery procedures must be performed by an authorized BRP Can-Am roadster dealer/distributor. Apply all necessary torques as indicated.

NOTE: The information and components/system descriptions contained in this document are correct at the time of publication. BRP however, maintains a policy of continuous improvement of its products without imposing upon itself any obligation to install them on products previously manufactured.

Due to late changes, there might be some differences between the manufactured product and the descriptions and/or specifications in this document. BRP reserves the right at any time to discontinue or change specifications, designs, features, models or equipment without incurring obligation.

The illustrations in this document show the typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts. However, they represent parts that have the same or similar function.

The content of this bulletin is designed as a guideline only. All mechanics performing predelivery procedures should have attended the current model-year service training.

Further information or inquiries should be directed to your service representative and specific *SHOP MANUAL* sections.

Make sure the customer receives the *OPERATOR'S GUIDE*, *PREDELIVERY CHECK LIST* signed copy and *SAFETY DVD*.

WARNING

Torque wrench tightening specifications must be strictly adhered to. Where specified, install new locking devices (e.g. lock tabs, elastic stop nuts). If the efficiency of a locking device is impaired, it must be renewed.

UPDATE SUMMARY

This summary highlights updates to the Predelivery Inspection for MY2014. It does not supersede procedures detailed further in this publication.

IMPORTANT: Technicians should read and apply all procedures in this PDI bulletin as applicable to model.

APPLICABLE TO	UPDATE DESCRIPTION	REFERENCE
ST Models	Uncrating method sequence modified	<i>UNCRATING</i>
	Front cargo module installation sequence additions, modifications and sequence changes	<i>PARTS TO BE INSTALLED</i>
	Parts installation sequence additions and modifications.	<i>PARTS TO BE INSTALLED</i>
	New front and side panels (all except Brazil models)	<i>PARTS TO BE INSTALLED</i>
	NEW engine coolant	<i>FLUIDS</i>
	New low beam headlight adjustment (CE models)	<i>SETUP</i>

MODEL LISTING

YEAR	MODEL	MODEL NUMBER	COUNTRY	PREDELIVERY KIT	SERIAL NUMBER
2014	Spyder ST SM5	B7EB, B7EC, B7EE, B7EF	Canada United States of America	(P/N 703 100 429)	All
		B7ED	Europe		
	Spyder ST SE5	B8EB, B8EC, B8EE, B8EF	Canada United States of America		
		B8ED	Europe		
	Spyder ST Limited SE5	D4ED	Australia	(P/N 703 100 386)	
		D4EH	Brazil		
		D4EA, D4EB, D4ED, D4EE, D4EF, D4EJ, D4EK	Canada United States of America	(P/N 703 100 429)	
		D4EC, D4EG, D4EL	Europe		
	Spyder ST-S SM5	C1EB, C1EC, C1ED, C1EE, C1EG, C1EG, C1EH, C1EJ, C1EK	Canada United States of America	(P/N 703 100 430)	
		C1EF	Europe		
	Spyder ST-S SE5	C2EL	Australia	(P/N 703 100 387)	
		C2EM	Brazil		
		C2EB, C2EC, C2ED, C2EE, C2EF, C2EG, C2EJ, C2EK	Canada United States of America	(P/N 703 100 430)	
		C2EH	Europe		

UNCRATING

Crate Cover Removal

NOTICE Allowing the crate to drop may cause serious damage to vehicle.

1. Position the crate on a firm, level surface.
2. Remove all screws holding crate cover to crate base.

NOTE: Screws that are used are Robertson† #2 type (or equivalent) that require the use of an appropriate screwdriver.



SCREW REMOVAL FROM CRATE COVER

3. Carefully cut both ends of crate tarpaulin.



1. Carefully cut both ends of crate tarpaulin

4. Locate front of vehicle
5. At front end of vehicle, pull crate cover out to-ward you, then up to clear vehicle fascia.

NOTICE Do not lift crate cover vertically. Pull crate cover out and up at front end of vehicle. Refer to illustration.



FRONT OF VEHICLE

1. Pull crate cover out and up to clear front fascia of the vehicle


NOTICE The crate cover must be pulled out-ward while lifting it to avoid damage to the ve-hicle.

Parts and Sub-crate Removal

NOTICE Be careful not to scratch the front bumper and front fascia.

NOTE: The sub-crates are located on each side of the vehicle.


1. On LH side, remove front cargo module sub-crate.

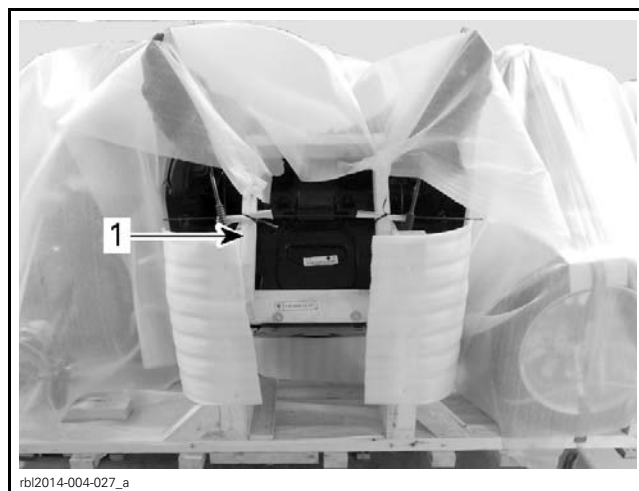

TYPICAL - LH SIDE

1. Sub-crate that contains front cargo module

† Robertson is a registered trademark of Robertson Inc.

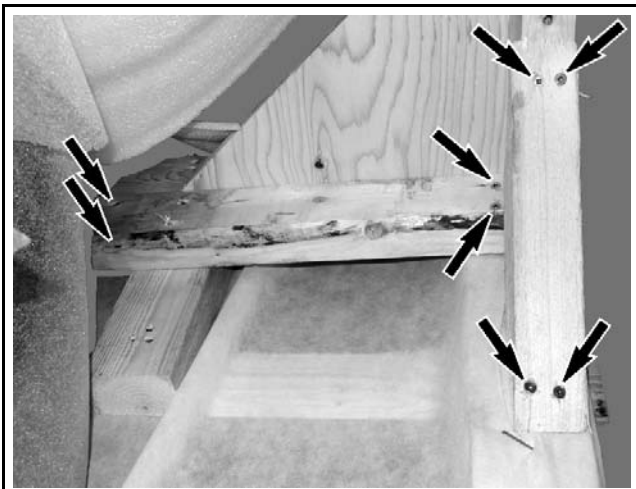

rbl2014-004-028_a


SCREWS TO REMOVE, BOTH SIDES OF CARGO MODULE SUB-CRATE

2. Remove protective foam from vehicle.



rbl2010-002-005

3. Remove windshield from front wheels.

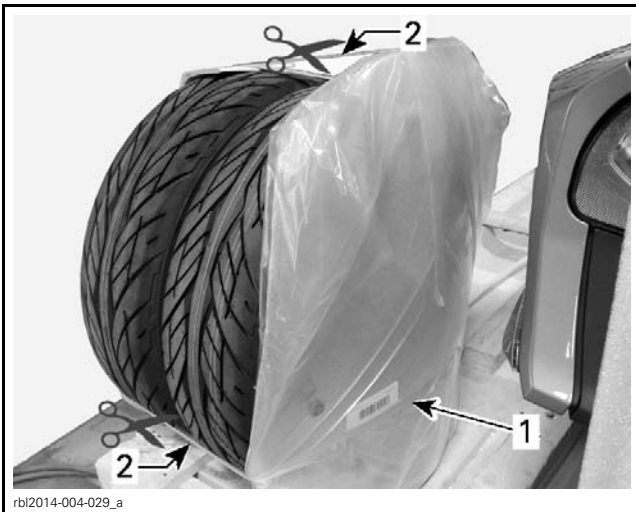

rbl2014-004-029_a

1. Windshield to remove
2. Cut tapes here

4. Remove front wheels from crate base.




rbl2013-003-001_b

TYPICAL

1. Front wheels

5. On RH side, remove shipping covers from fenders.

6. Remove two fenders from sub-crate.

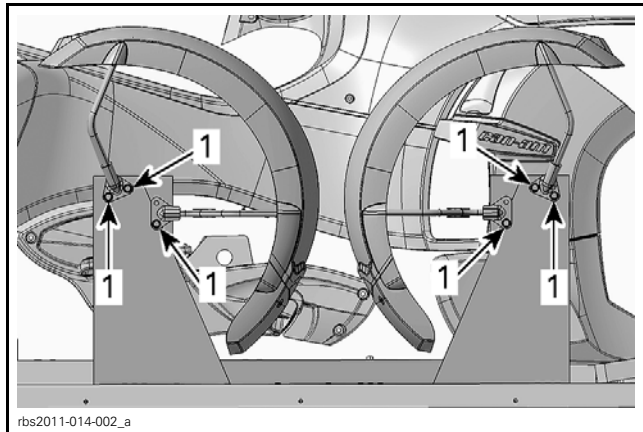


rbs2011-014-002_a

TYPICAL - RH SIDE - SUB-CRATE THAT CONTAINS FRONT FENDER

1. Bolts to remove (6)

7. Remove fender sub-crate.

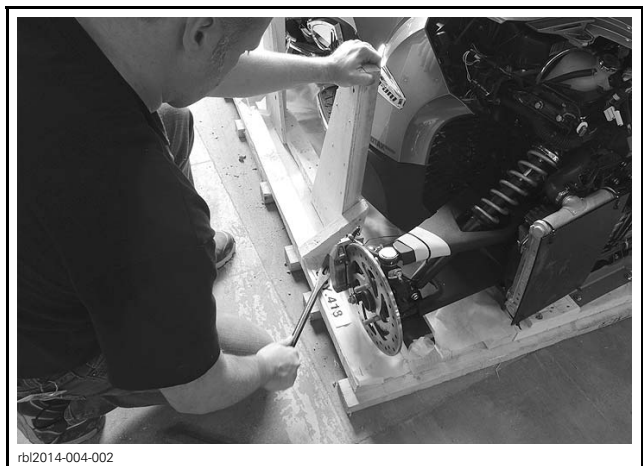

rbl2014-004-002

FRONT FENDER SUB-CRATE REMOVAL

8. If you do not have a fully charged new battery of the same type on hand, remove battery from vehicle and carry out the *BATTERY CHARGING* procedure. See *BATTERY* further in this bulletin.

Parts Check

Ensure that the crate includes the following items (inside front storage compartment or secured to front of vehicle):

NOTE: Empty all contents from front storage compartment.

DESCRIPTION	MODEL	QTY
Operator's guide	All	1
Predelivery check list		1
Safety DVD		1
Predelivery kit		1
Service covers		2
Windshield trims		2
Wheel caps		2
Fender reinforcement brackets		2
Front cargo liner		ST LTD

The predelivery kit includes the following items:

PREDELIVERY KIT		
DESCRIPTION	WHERE USED	QTY
Wheel lug nut - chrome (Base and LTD)	Front wheels	6
Wheel lug nut - black (ST-S)	Front wheels	6
M6 X 20 hexagonal flanged forming screw	Front cargo module	4
M6 X 12 hexagonal flange screw	Front cargo module	2
M6 panel nut	Body panels	2
M6 panel nut (All models except Brazil)	Body panels	4
M6 x 20 Torx screw	Body panels	4
Plastic washer	Body panels	2
Plastic washer (All models except Brazil)	Body panels	4

PREDELIVERY KIT		
DESCRIPTION	WHERE USED	QTY
M8 x 20 hexagonal flange screw	Front fenders	8
M6 x 12 hexagonal flange screw (reinforcement)	Rear fender	4
Locking tie	Rear fender	4
M6 X 20 Torx screw	Rear fender	4
M6 X 16 Torx screw (reinforcement)	Rear fender	4
Plastic washer	Rear fender	4
M6 elastic flange nut	Rear fender	4
M6 elastic flange nut (reinforcement)	Rear fender	4
Battery installation kit (2 bolts and 2 nuts)	Battery terminals	1
M5 socket button head screw	Windshield	4
M5 flat washers	Windshield	8
M5 black hexed nut	Windshield	4


Lifting the Front of Vehicle

⚠ WARNING

No one should be standing in front or at the back of the vehicle while straps are being cut.


1. Remove metal plate retaining front of vehicle to crate base.

NOTE: If you are planning to use a hoist to lift vehicle from crate base for tire installation, only the wood screws need to be removed at this time.

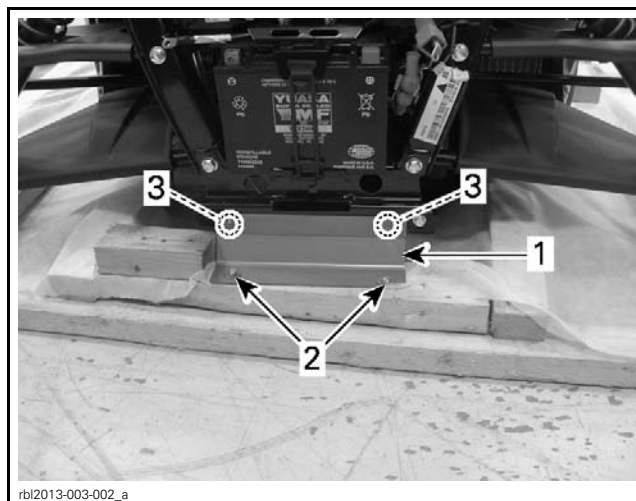


1. Plate
2. Screws
3. Screw and nuts

2. Remove straps retaining side and front of vehicle to crate base.

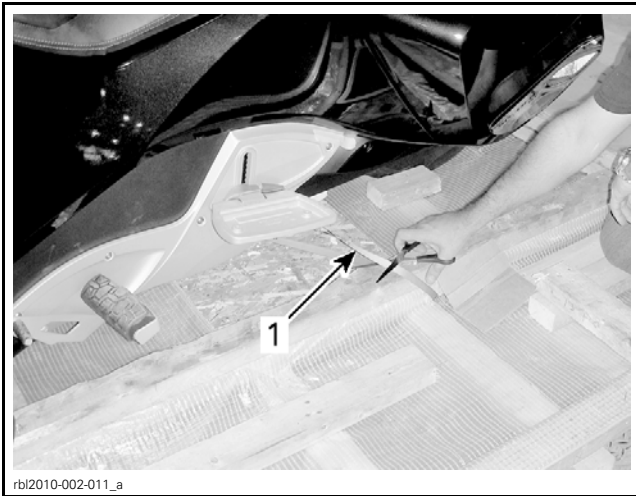


TYPICAL
1. Side strap

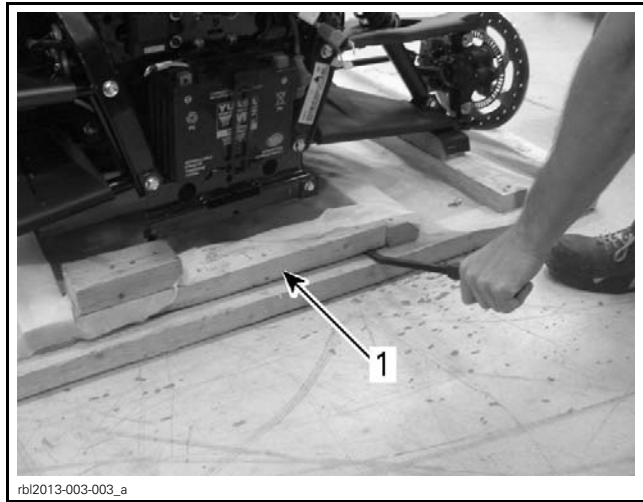


TYPICAL
1. Wood piece to remove

2. Install a floor jack with a piece of wood on top to increase contact surface of jack pad.

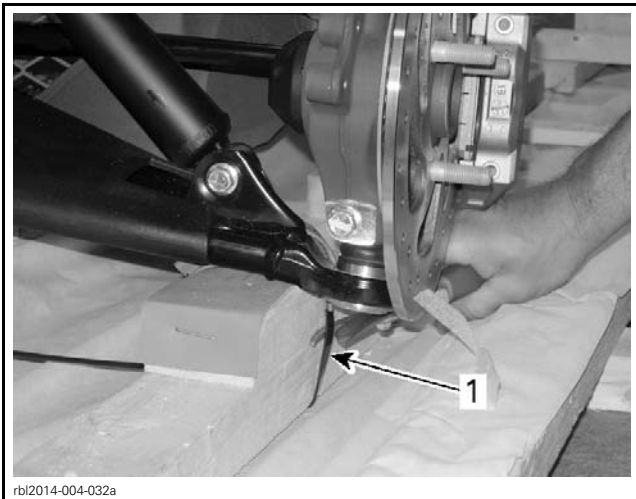

LH FRONT ILLUSTRATED
1. Front strap, each side

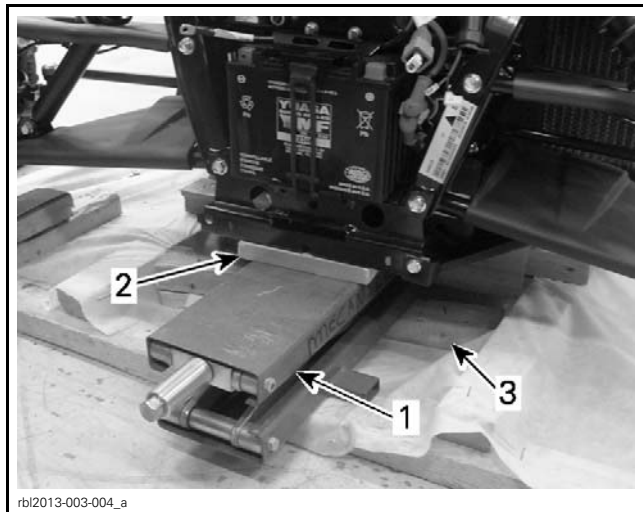

TYPICAL - FRONT OF VEHICLE
1. Jack
2. Wood piece
3. Wood piece removed earlier

NOTE: The steps to follow are describes using two methods for lifting the front of the vehicle from the crate base. The conventional method uses a hydraulic jack and the alternate method uses a chain block. Use the proper method according to your shop layout.


Conventional Method

1. Remove piece of wood located at the front of the vehicle.

NOTE: This piece of wood can be used to level the jack.

CAUTION Approach with care when vehicle is jacked because it may be unstable.

3. Lift the vehicle.

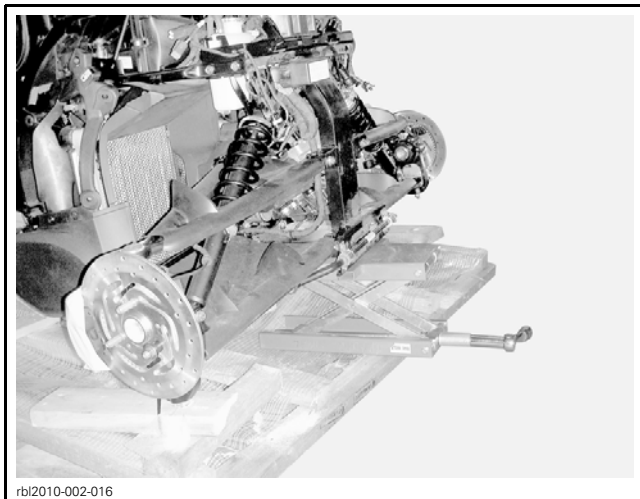

rbl2010-002-016


TYPICAL

NOTICE Never lift vehicle by the suspension arm.

Alternate Method

1. Install proper straps with hooks on RH and LH lateral supports of vehicle.

NOTE: Insert hooks through the holes in the frame.

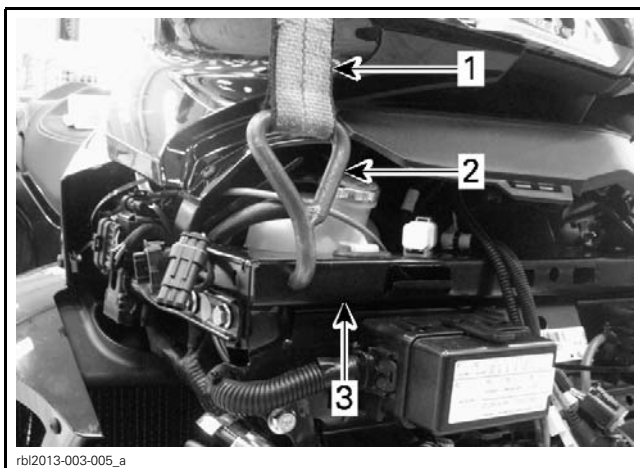

rbl2013-003-005_a

TYPICAL

1. Strap
2. Hook
3. Frame

2. Hook straps on an appropriate lifting kit.
3. Lift vehicle using a chain block.

NOTICE Never lift vehicle by the suspension arm.

Front Wheels Installation


1. Clean front and rear brake discs.

NOTICE A thin layer of anticorrosion treatment is present on the brake discs and must be removed before using the vehicle. Not conforming to this procedure may lead to a brake chattering squeaking and brake pad replacement would be necessary.

BRAKE DISC CLEANING	
SERVICE PRODUCT	REQUIRED TOOL
XPS BRAKES AND PARTS CLEANER (CAN) (P/N 219 701 776)	Shop rag
XPS BRAKES AND PARTS CLEANER (USA) (P/N 219 701 705)	

NOTE: An equivalent brakes and parts cleaner that is respectful of all laws and regulations in your area may be used.

2. Remove nut securing front brake discs to vehicle.

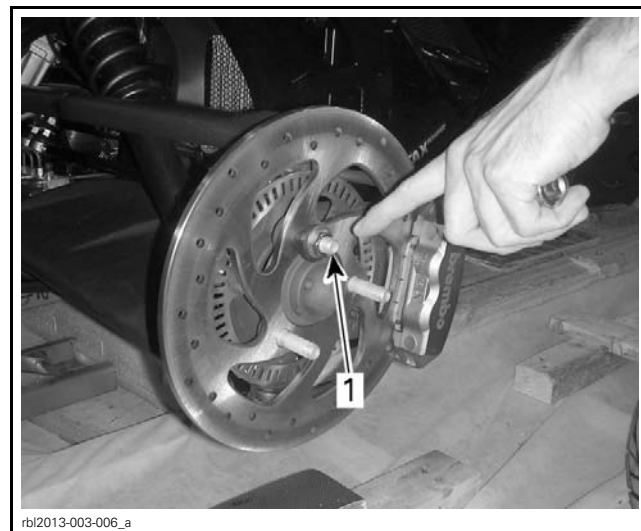

rbl2013-003-006_a

TYPICAL

1. Nut to remove, both sides

3. Install front wheels on vehicle.

NOTE: Ensure that the rotation direction shown by the arrow on the tire is respected.

⚠ WARNING

The tires are only designed to rotate in one direction. Do not switch the left and right front wheels.

4. Hand tighten wheel lug nuts snug (from PDI kit).
5. Lower vehicle on crate base.
6. Remove the floor jack (or hoist and lifting strap).



TYPICAL

7. Torque wheels lug nuts.

PART	SPECIFIED TORQUE
Wheel lug nut	105 N•m (77 lbf•ft)

8. Install wheel caps (inside front storage compartment).




TYPICAL

1. Front wheel cap to install, one each side

9. Remove metal plate that retained front of vehicle to crate base.

NOTE: This step is only applicable if a hoist was used to lift front of vehicle from crate base for tire installation.

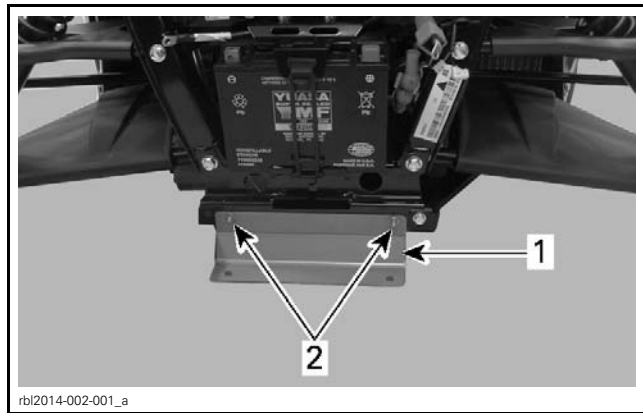


1. Metal plate to remove
2. Screws to remove

Vehicle Removal

NOTE: Parking brake pedal brakes only the rear wheel. Press the pedal down to apply the parking brake. Press the pedal down again to remove it. The parking brake pedal is behind the operator's left footpeg.

NOTICE Do not apply excessive force when applying or removing the parking brake.


1. Place a piece of wood behind the front wheels to prevent the vehicle from rolling.

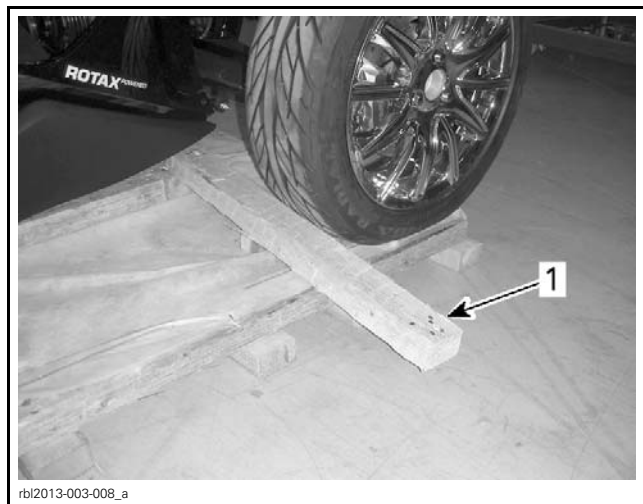

TYPICAL - FRONT RH WHEEL


1. Wood piece

2. Remove the piece of wood at the back of the crate and insert it under the rear wheel.

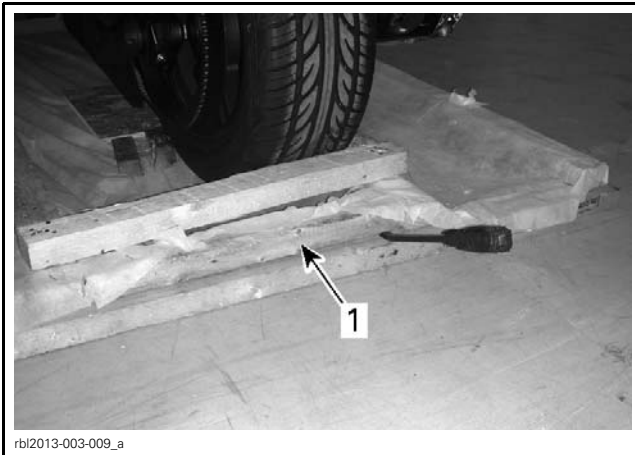

TYPICAL


1. Wood piece

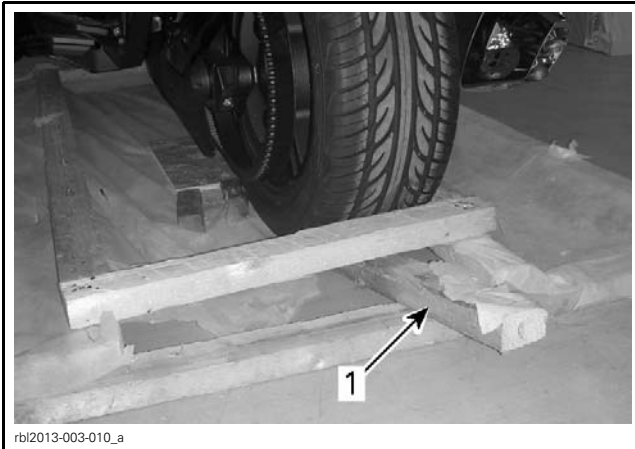

TYPICAL

1. Wood piece removed earlier


3. Remove the piece of wood from behind the rear wheel.

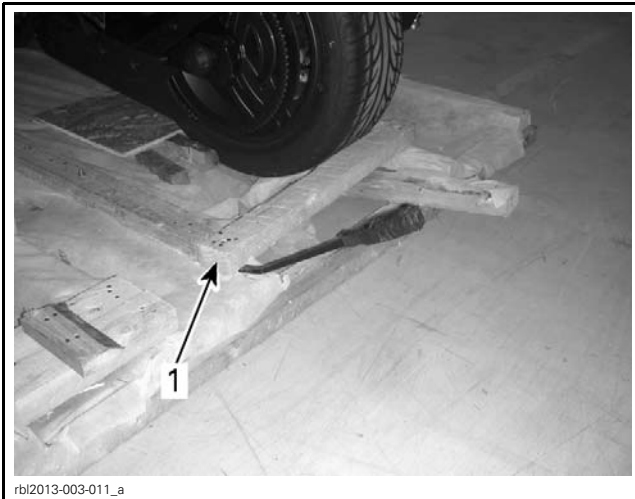

TYPICAL

1. Wood piece behind rear wheel

4. Carefully remove pieces of wood positioned earlier behind the front wheels.
5. With the help of your assistant, move vehicle rearward out of the crate base.

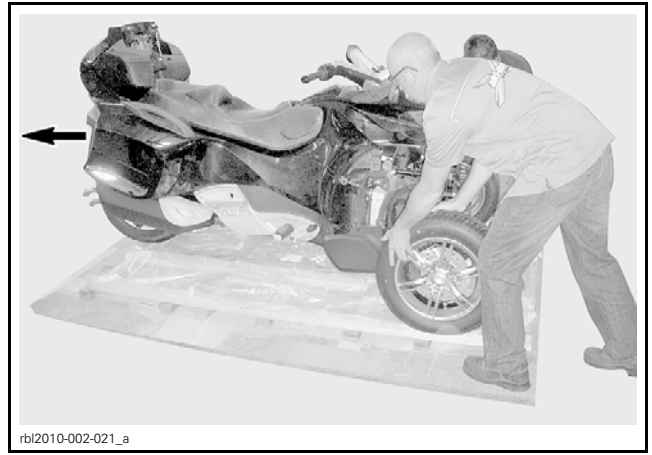

TYPICAL

NOTICE Always move vehicle rearward out of the crate base.

PARTS TO BE INSTALLED


Front Cargo Module

⚠ WARNING

Make sure battery is not connected before installing front cargo module. Do not install front cargo module if battery is connected because sparks can occur if tools touch battery terminals.


1. Unlock and lift seat to full open position.
2. Remove LH and RH upper side panels.
 - 2.1 Cut locking tie retaining upper side panel. Remove panel nut and screw.

NOTE: Keep panel screws and nuts for installation further in procedure.

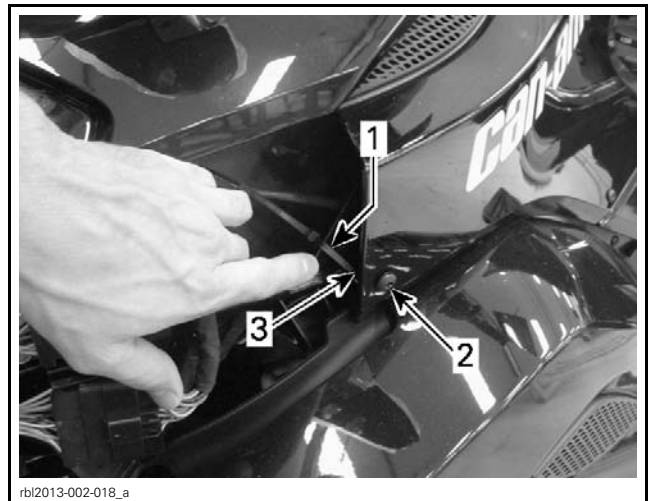

TYPICAL - BRAZIL MODELS

1. Locking tie
2. Panel screw
3. Panel nut

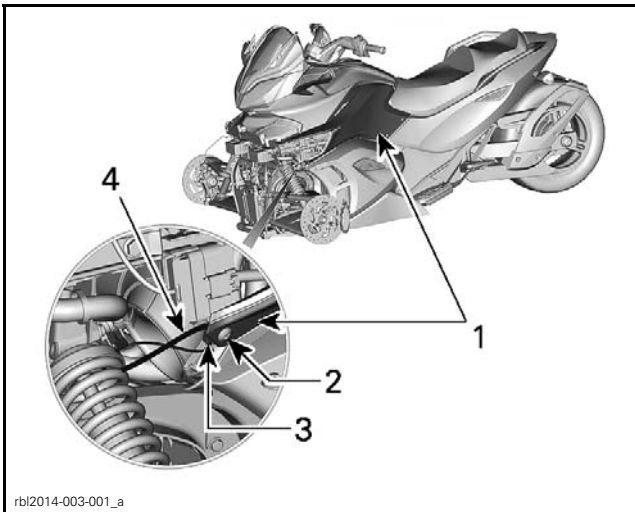


rbl2014-003-001_a

TYPICAL - ALL EXCEPT BRAZIL MODELS

1. Upper side panel
2. Panel screw
3. Panel nut
4. Locking tie

2.2 Remove screws at rear of panel.

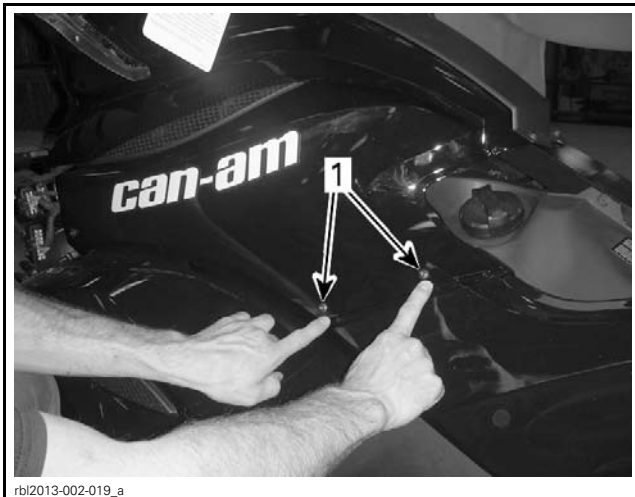


rbl2013-002-019_a

TYPICAL

1. Screws to remove

2.3 Install the previously removed panel nut on lateral bracket.

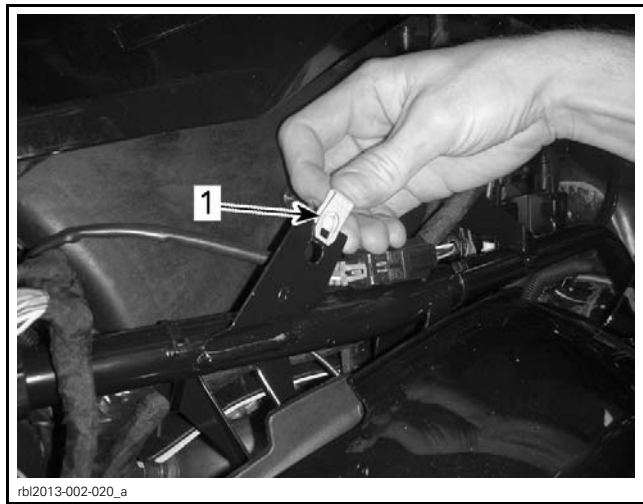


rbl2013-002-020_a

TYPICAL

1. Panel nut

3. Remove antenna from the cargo module sub-crate.

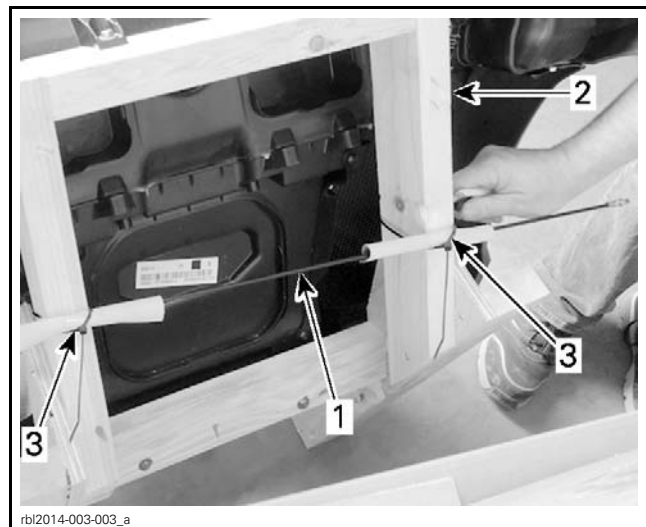


rbl2014-003-003_a

ANTENNA REMOVAL

1. Antenna
2. Front cargo module sub-crate
3. Locking ties to cut

4. Assisted by another person, remove and discard bolts holding the bottom and the top sections of sub-crate.

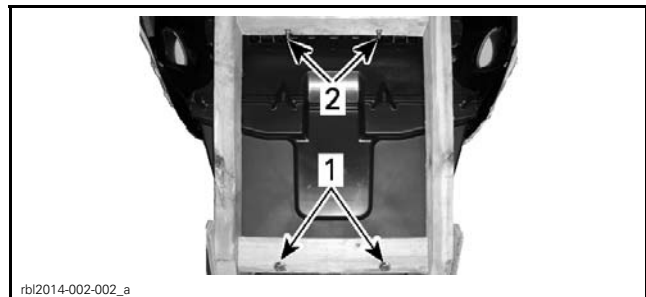


rbl2014-002-002_a

TYPICAL

1. Lower retaining bolts
2. Upper retaining bolts

NOTE: Be careful not to lose the caged nut located in the bottom fixation hole of the front cargo module.

5. Open front storage compartment cover.
6. Remove 3 plastic rivets securing LH and RH front panels.

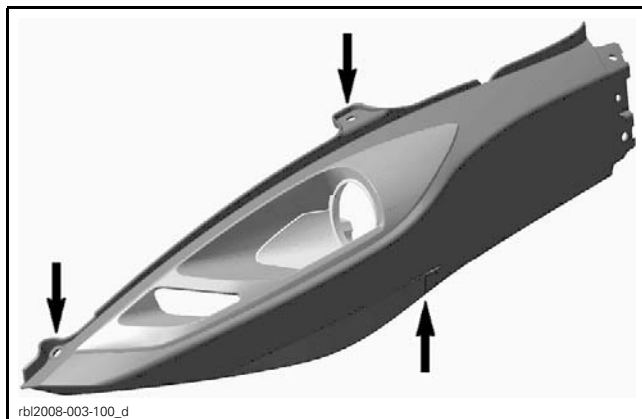


rbl2008-003-100_d

TYPICAL - FRONT PANEL PLASTIC RIVET LOCATIONS

7. Cut locking ties securing horn and AAPTS harness to frame.
8. Tap two middle holes on the vehicle frame for M6 x 20 screws (from PDI kit).

NOTE: Running a tap through the two middle holes is not necessary since the M6 X 20 screws provided in the PDI kit are self-tapping screws. However, it will ease installation of the middle screws due to screw hole access constraints.

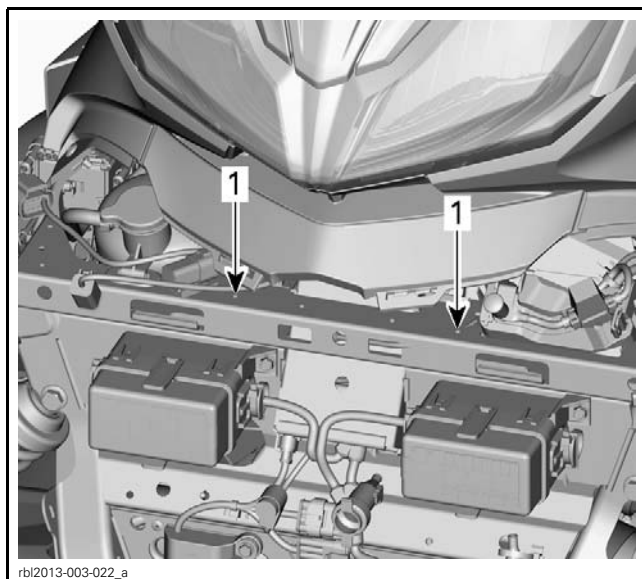

rbl2013-003-022_a

1. Holes to tap for screws



rbl2013-003-018

TYPICAL

9. On RH side, undo reusable locking ties and secure harness as shown.



rbl2013-003-019_a

1. Tie rap


10. Extract hood latch release cable.



rbl2013-003-020_a

1. Hood latch release cable

11. Ensure the following cables and connectors are accessible prior to installing front cargo module, cut locking ties if required.

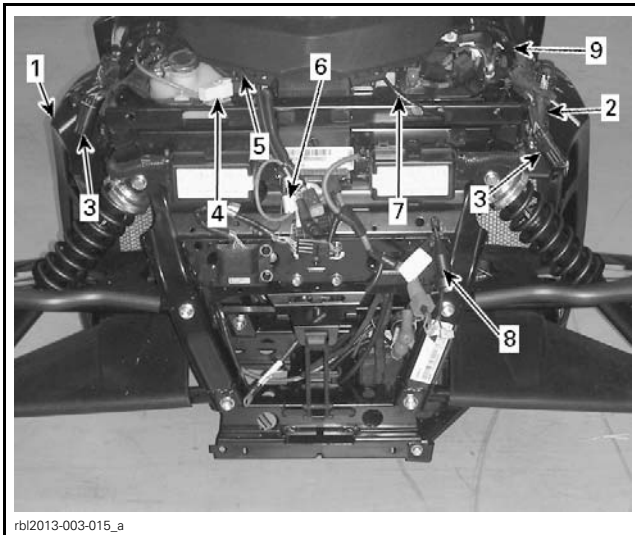

TYPICAL - REFER TO THE FOLLOWING TABLE FOR ITEMS DESCRIPTION

ITEMS	DESCRIPTION
1	AAPTS sensor connector (hidden on the illustration)
2	Horn connector (hidden on the illustration)
3	Low beam headlight (CE)
4	DLC connector (B.U.D.S.)
5	Storage cover actuator connector (option package)
6	Storage cover switch connector (option package)
7	Storage cover cable
8	12 V power outlet (option package) (LTD model only)

12. Turn up and store cable and all the wiring and connectors in the front of the vehicle to prevent them from being pinched between the front cargo module and front frame.

ST LTD Model Only

13. Connect the auxiliary cable and install nut and cap.




1. Auxiliary cable



1. Auxiliary cable nut and cap

14. Connect Black (-) negative cable and PURPLE (+) positive cable to 12V connector and cover with rubber boot.

NOTE: Negative (-) and positive (+) positions are indicated on the connector.

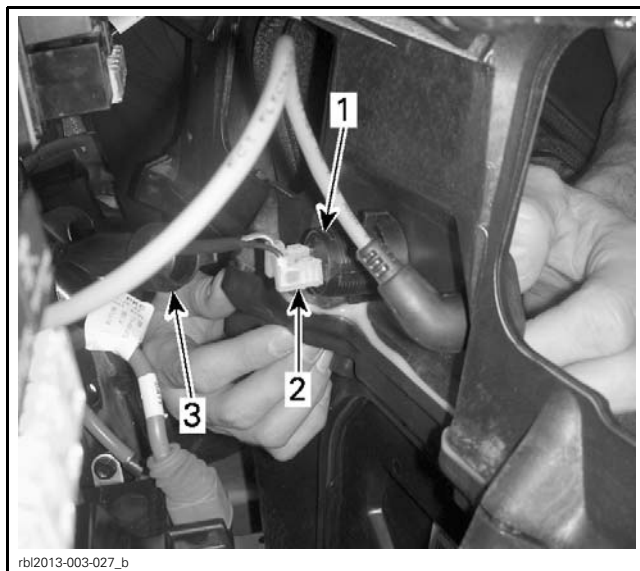


rbl2013-003-027_b

1. 12V connector
2. Negative and positive cables connector
3. Rubber boot

All Models

15. Before installing storage compartment, remove the fuse box service covers as follows:

15.1 Push down on the fuse service covers to open and pull the covers off.

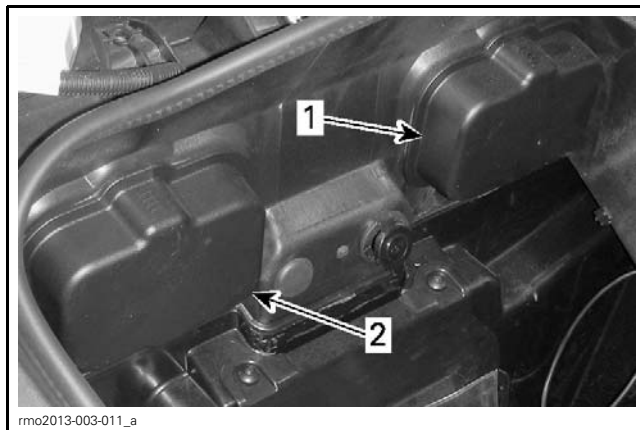

rmo2013-003-011_a

1. Left fuse box service cover
2. Right fuse box service cover


NOTE: Removal of fuse box service covers is required only to aid in the alignment of the front cargo module when installing it onto the front frame of the vehicle.

15.2 Turn up and store all the wiring and connectors on front cargo module to prevent them from being pinched between the cargo module and front frame.

All Models

16. Assisted by another person, position front cargo module onto upper supports in the front frame of the vehicle.

NOTE: Ensure that no cable or wiring was pinched between cargo module and front frame prior to installing any fastener.

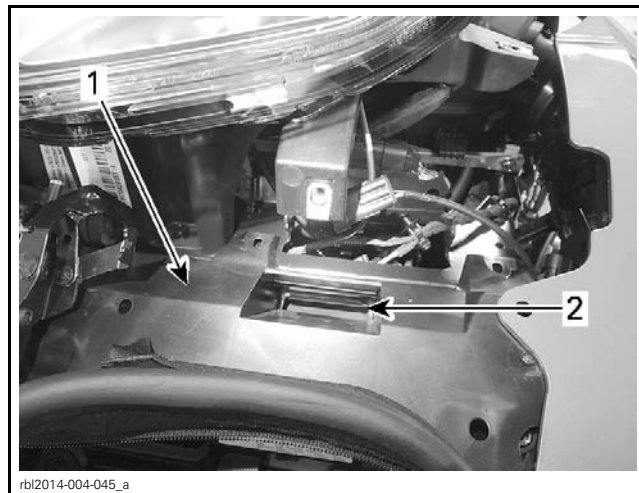

rbl2014-004-045_a


TYPICAL

1. Front cargo module
2. LH upper support, RH similar

17. Secure the front cargo module using following hardware.

- At the TOP, use four M6 x 20 hexagonal flanged forming screws.
- At the bottom, use two M6 x 12 hexagonal flanged screws.


NOTE: In following illustration, some panels were removed for clarity

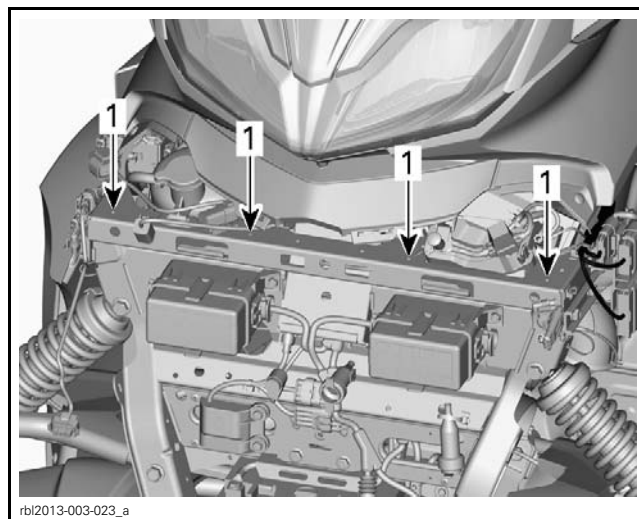

rbl2013-003-023_a

TOP SCREWS

1. M6 X 20 hexagonal flanged forming screw locations

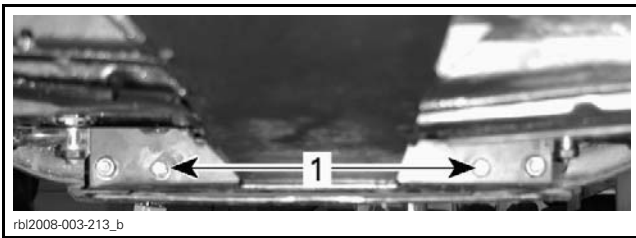

BOTTOM SCREWS


1. M6 X 12 hexagonal flanged screws

NOTE: Install all screws before tightening them.

FRONT CARGO MODULE SCREWS	SPECIFIED TORQUE
M6 X 20 hexagonal forming screws (4)	4.5 N•m (40 lbf•in)
M6 X 12 hexagonal flanged screws (2)	10 N•m (89 lbf•in)

18. Reinstall the fuse box service covers as follows:

- 18.1 Position the bottom of the fuse box service cover and push down and in until the top of the fuse box service cover engages.

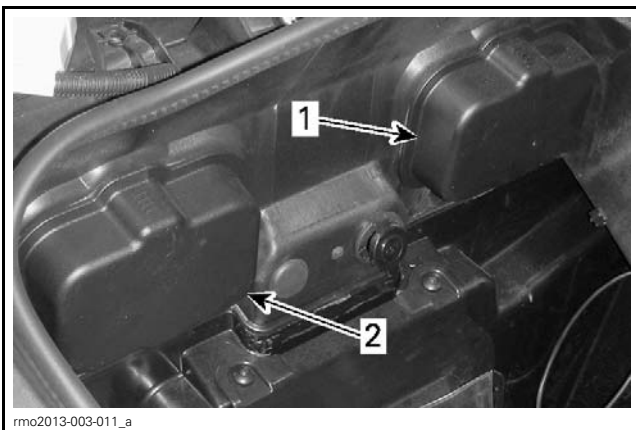

TYPICAL

1. Left fuse box service cover
2. Right fuse box service cover

Battery

Battery Activation

The battery is fully activated and only requires an initial top up charge to ensure it is fully charged prior to vehicle delivery.

NOTE: If you do not have a fully charged new battery at hand, the battery can be removed from the vehicle, fully charged as per manufacturers specification and reinstalled in the vehicle later.

IMPORTANT: It is of the utmost importance for the battery life span that the initial charging be performed as recommended. Refer to **the latest CAN-AM ROADSTER BATTERY ACTIVATION**,


CHARGING AND MAINTENANCE. Correct keywords to search **the latest** Service Bulletin in BOSSWEB or Info Center are :**"roadster battery activation"** including quotation marks.

Install charged battery in battery rack.

Battery Removal

The battery is located on the front frame member, just aft of the front cargo module.


1. Pull down the rubber strap to disengage it from the hook.

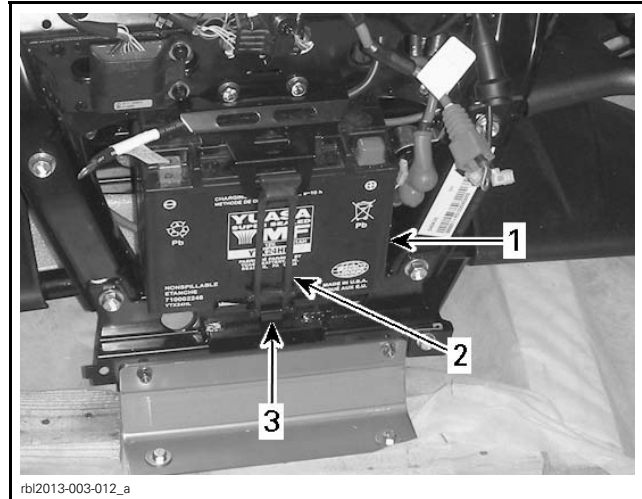

TYPICAL

1. Battery
2. Rubber strap
3. Hook

2. Remove bracket and battery from the vehicle.

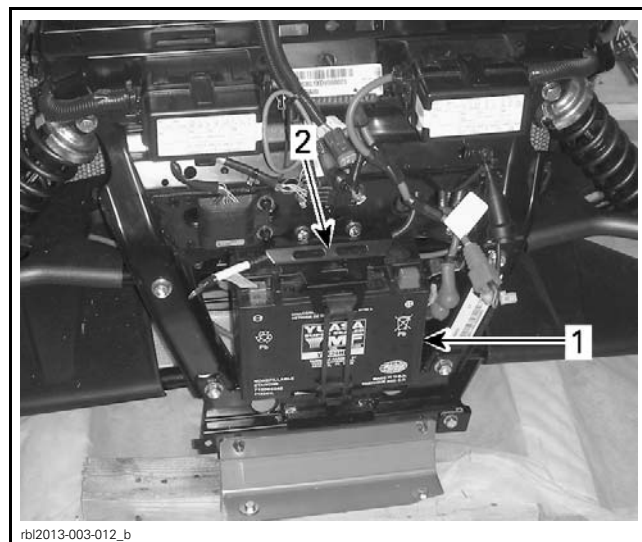

TYPICAL

1. Battery
2. Bracket

Battery Installation

- If front storage module is installed, carry out the following:
 - Open front storage compartment cover.
 - Unzip storage compartment liner for access to battery access panel.
 - Remove battery access panel.
- Insert battery in battery rack with battery posts facing out.

NOTICE Always charge battery before its installation on the vehicle.

- Connect RED (+) positive battery cables first using battery screws and square nuts from the PDI kit.

⚠ WARNING

Always connect RED (+) cable first.

- Connect BLACK (-) negative battery cables second using battery screw and nut from the PDI kit.

PART	SPECIFIED TORQUE
Battery post screws	4 N•m (35 lbf•in)




rb12013-003-013_a

- Battery
- RED (+) positive battery cable
- Positive post battery screw

- Apply dielectric grease on battery posts.

SERVICE PRODUCT	
Battery posts	DIELECTRIC GREASE (P/N 293 550 004)


- Install RED rubber boot cover.

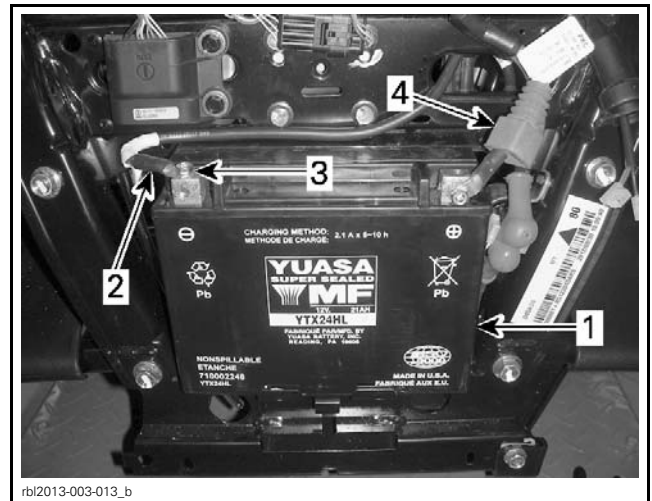

rb12013-003-013_b

- Battery
- Black (-) negative battery cable
- Negative post battery screw
- RED rubber boot cover

- Position battery retaining bracket over battery. Be sure to properly engage it in the frame front member.
- Install rubber retaining strap.

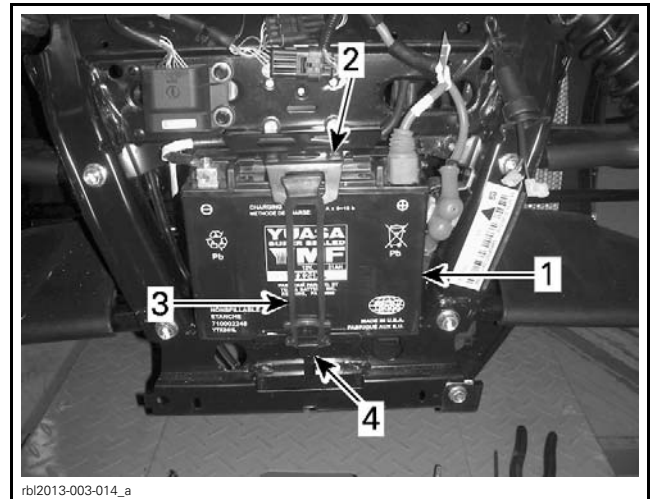


rb12013-003-014_a


- Battery
- Retaining bracket
- Rubber strap
- Hook on lower front frame member

APTS (Ambient Air Pressure and Temperature Sensor) Installation

- Connect APTS connector and route cable through retaining guide clips (RH side of cargo module).

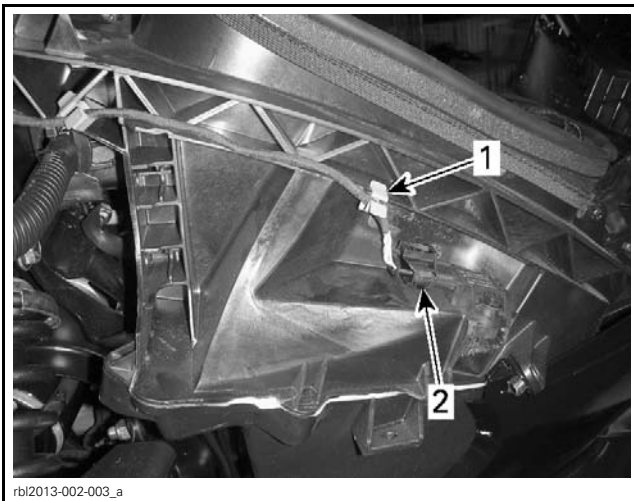

1. Cable retaining clips

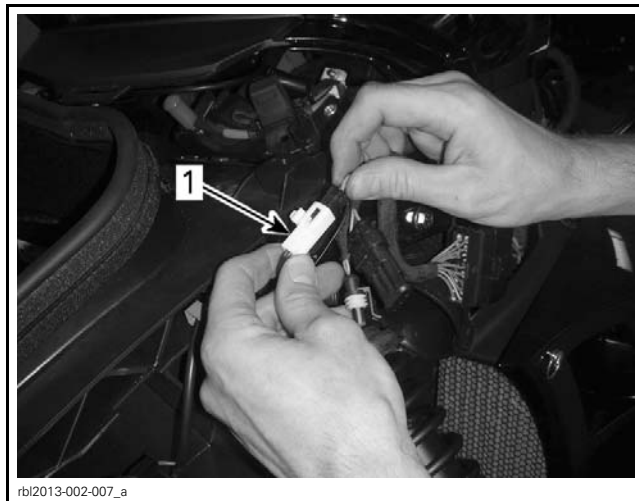


1. Horn connector

Low Beam Headlight Connection

Models with Low Beam Headlights Mounted in Cargo Module

1. Connect wiring harness to low beam headlights.

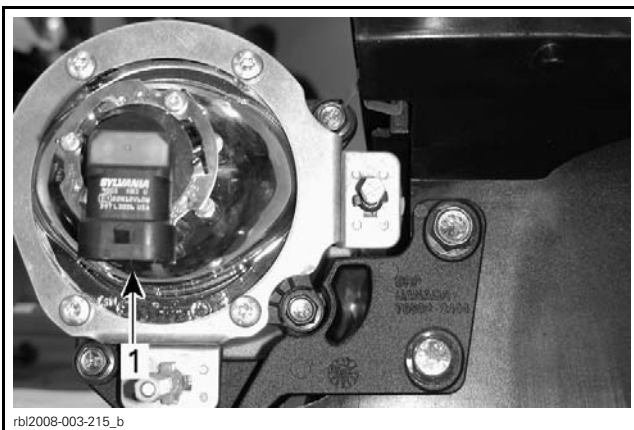

1. Low beam headlight connector


2. Verify low beam headlights aiming. Refer to *LIGHTS* in *SETUP*.

Horn Connection

1. Connect horn connector.
2. Route cable through the retaining guide clips (LH side of cargo module).

Models with Low Beam Headlights Mounted in Cargo Module

If necessary, remove horn from vehicle to ease connector installation.

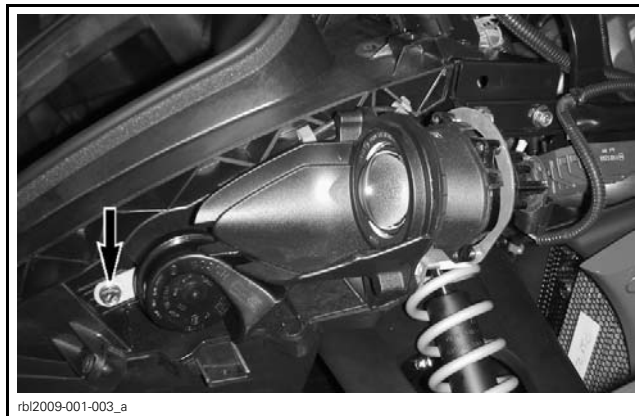

TYPICAL - HORN RETAINING BOLT LOCATION

Latch Release Cable, Front Storage Compartment Cover

1. Feed the latch release cable through the latch base eyelet.
2. Attach latch release cable end to latch lever tongs.
3. Using pliers, squeeze lever tongs together to prevent cable from coming out of latch release lever.




4. Verify if the front storage compartment cover opens and closes correctly.
5. Adjust cable if necessary.

NOTICE If the key does not turn easily, do not force it. Pull it out and reinsert.

Diagnostic Link Cable (DLC)

1. Insert diagnostic link cable (DLC) in its holder in the front section of vehicle for storage.

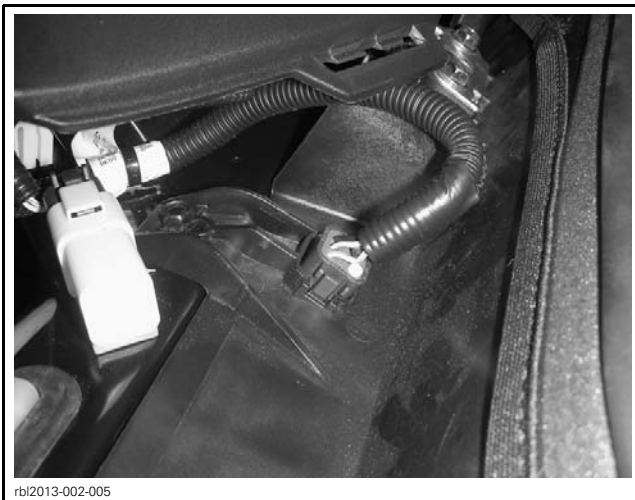

DLC CABLE STORAGE

Body Parts Installation

NOTICE Do not overtighten screws. Any deformation in the body panel around the screw is an indication that it is too tight. Be careful not to damage the panels.

Front Panels

1. Install M6 panel nuts on front panels (included in the PDI kit)


Brazil models



RH FRONT PANEL SHOWN, LH SIMILAR

1. Front M6 panel nuts

All Except Brazil Models

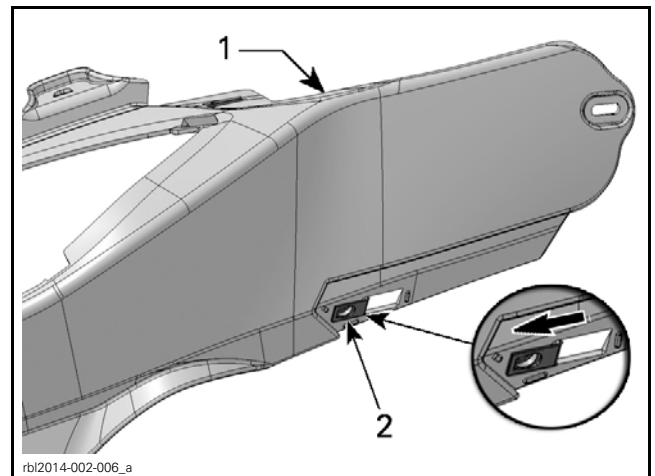


LH FRONT PANEL SHOWN, RH SIMILAR

1. Front panel
2. Front M6 panel nuts

All Models


2. Install both front panels on vehicle using plastic rivets removed earlier.

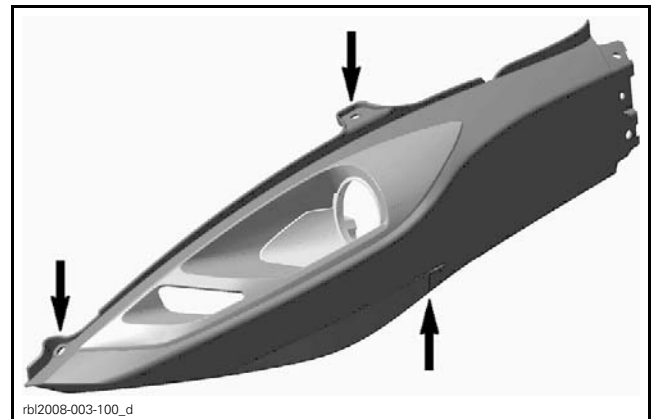

TYPICAL - FRONT PANEL PLASTIC RIVET LOCATION

3. Secure front panels to vehicle using screws removed during front panel removal earlier.

NOTE: On models with low beam headlights in cargo module, move side air deflector backward for a best fit.

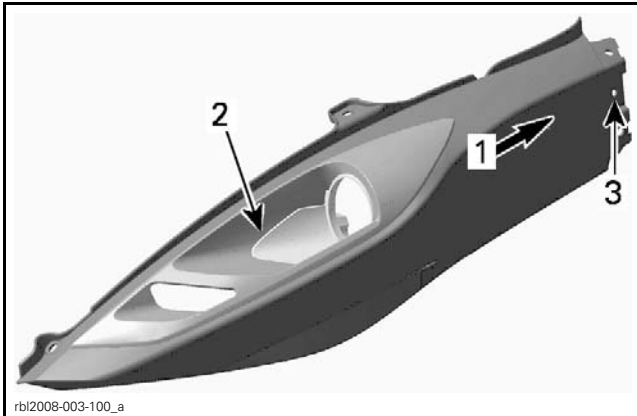


rbl2008-003-100_a

BRAZIL MODELS

1. Move side air deflector backward
2. Area that must be fit
3. Front panel screw

All Except Brazil Models


Insert front tabs of upper side panel in slots provided in front panel.

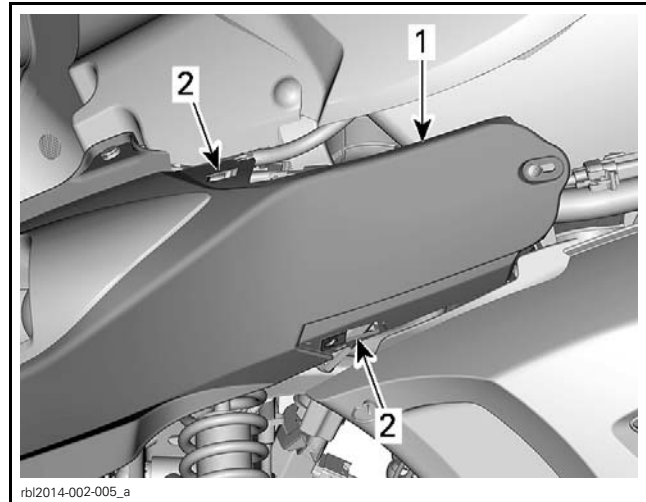

rbl2014-002-005_a

1. Front panel
2. Slots for inserting front tabs of upper side panel

Install screw to secure front end of upper side panel.

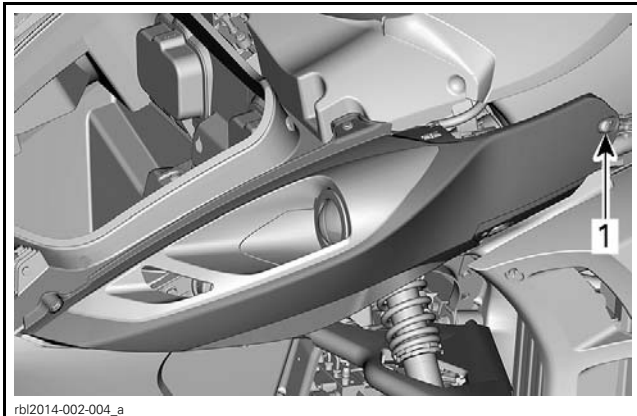

rbl2014-002-004_a


ALL EXCEPT BRAZIL MODELS

1. Front panel screw

Upper Side Panel Installation

Brazil Models

Position upper side panels on vehicle and install screws illustrated.

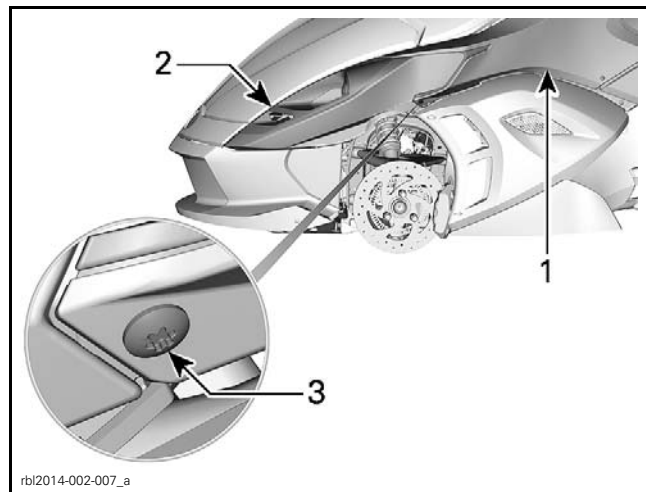

rbl2014-002-007_a

1. Upper side panel
2. Front panel
3. Screw to install

All Models

Close seat.

Service Cover

Install service cover on the front of vehicle (included in front cargo module).

Close front storage compartment cover.

Front Fenders


NOTE: Fender installation similar on both sides.

1. Cut locking tie that hold harness bracket on fender.



rsi2008-013-003_a

TYPICAL - LH SIDE ILLUSTRATED

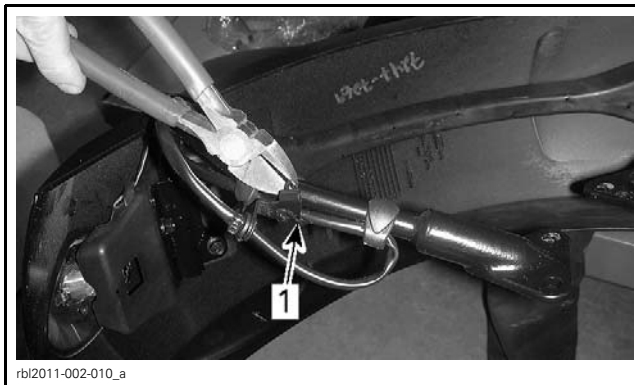


TYPICAL

1. Locking tie


2. Ensure proper position of fender wiring harness.

NOTE: LH illustrated, RH similar.

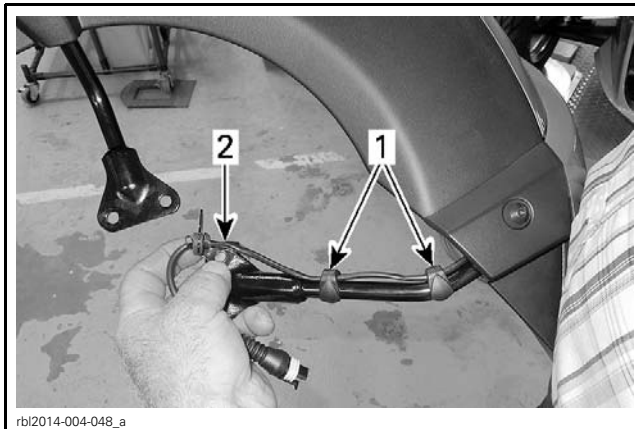

1. Wiring harness clamps
2. Wiring harness bracket

NOTE: Do not remove protection from suspension arms.

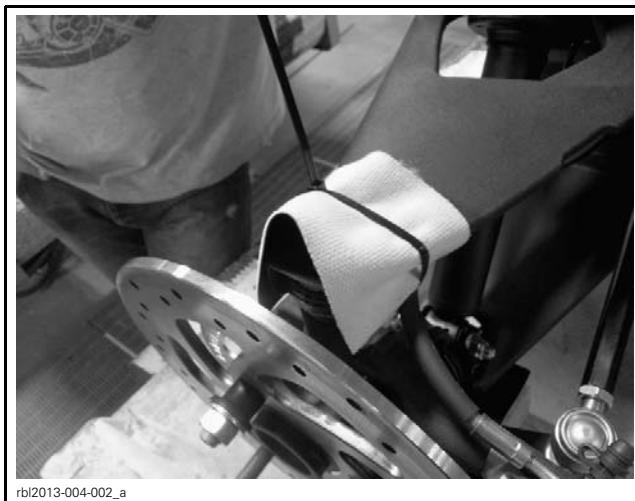

TYPICAL

3. Position front fender on vehicle.




TYPICAL

4. Install 4 M8x 20 hexagonal flange screws loosely to hold the fender in its position.

NOTE: Be sure to install the fender light harness and ABS harness brackets as illustrated. Do not torque screws at this time.

NOTE: Left side fender installation illustrated, right side similar.

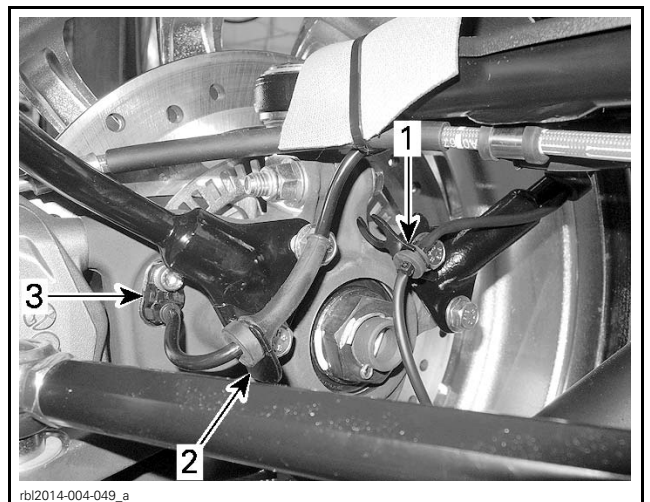

1. Fender light harness bracket, top screw, forward fender support
2. ABS harness bracket, lower screw, rear fender support
3. ABS sensor


5. Connect fender light connector.

NOTE: Make sure harnesses are properly secured through cable grommet in upper suspension arm.



rbl2013-002-006_a


1. Fender light connector

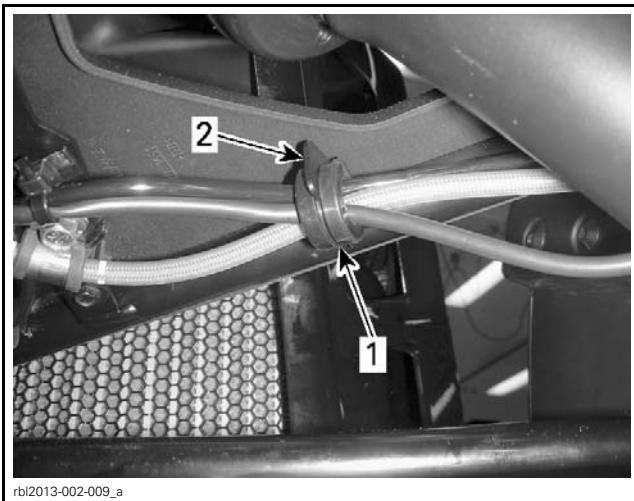

rbl2013-002-009_a

1. Cable grommet
2. Harness bracket

6. Tighten fender support screws to specification.

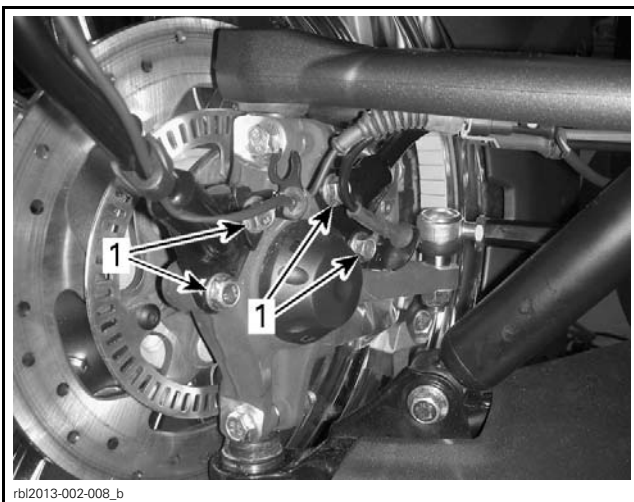


rbl2013-002-008_b

1. M8 x 20 hexagonal flange screws

SPECIFIED TORQUE	
Fender support retaining screws	24 N•m (18 lbf•ft)

7. Ensure harness brackets are properly positioned when torque is applied.
8. Ensure cap for wheel hub nut is properly secured to steering knuckle.

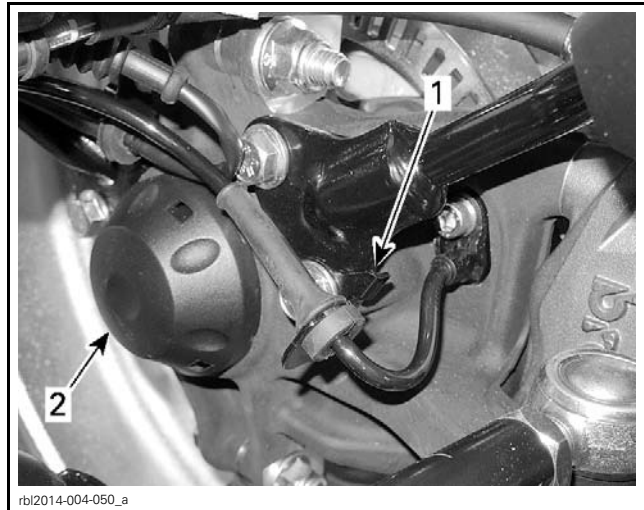

rbl2014-004-050_a

TYPICAL


1. Check for harness bracket contact here
2. Wheel hub nut cap secure

9. Remove protection from suspension arms.

Windshield

1. Align windshield on windshield support.
2. Install two trims, four M5 x 16 screws, 8 washers and four nuts (from PDI kit) to secure windshield.

NOTE: There is one washer on the screw side and one on the nut side.

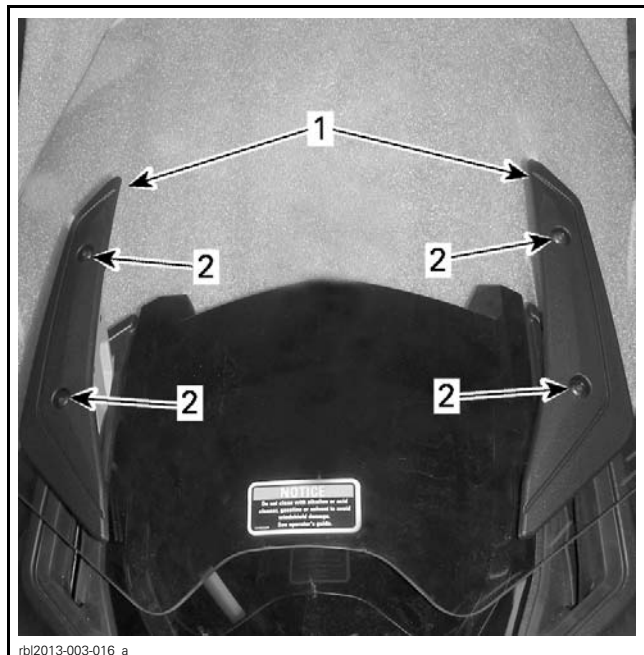

rbl2013-003-016_a

1. Trims
2. Screws and washers



rbl2013-003-017_a

1. Nuts

NOTE: You can move windshield along the tracks to facilitate installation of nuts.



rmo2013-003-013_a

3. Torque windshield retaining nuts.

PART	SPECIFIED TORQUE
Windshield retaining nut	2.5 N•m ± .5 N•m (22 lbf•in ± 4 lbf•in)

Rear Fender


NOTE: Before applying any torque, install all nuts and screws.

ST LTD Models Only

Remove rear saddlebag kit.

All Models

1. Remove rear fender packaging.
2. Loosen LH and RH fender support screws.

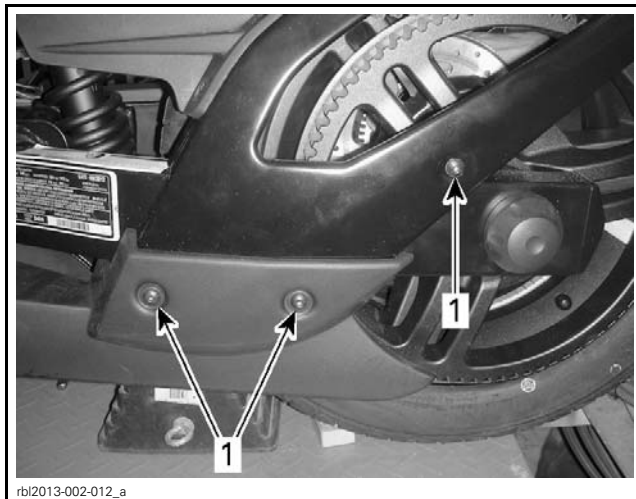


rbl2013-002-012_a

LEFT SIDE FENDER SUPPORT

1. Screws, washers and nuts

3. Pre-assemble rear fender to its LH and RH rear fender brackets with M6 x 12 screws, flat plastic washers and M6 nuts (on back side).

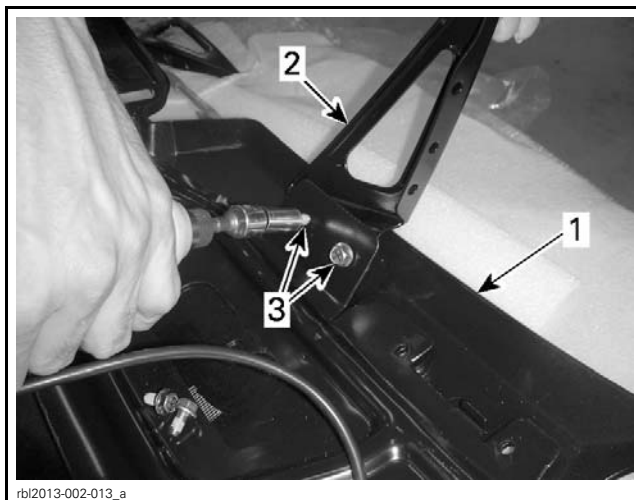


rbl2013-002-013_a


1. Rear fender
2. Support
3. M6 x 12 Screws, washers and nuts

NOTE: Do not torque screws.

4. Connect license plate light connector.
5. Secure license plate light harness inside RH rear fender support using 4 locking ties (from PDI kit) into factory installed retainers.

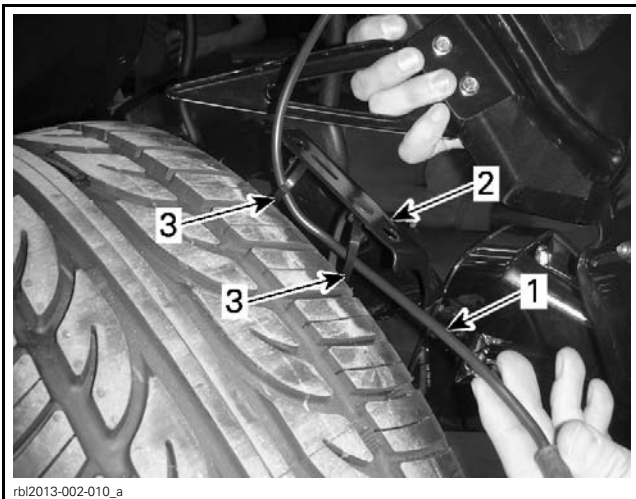


1. License plate light harness
 2. Rear fender support
 3. Locking ties in retainers

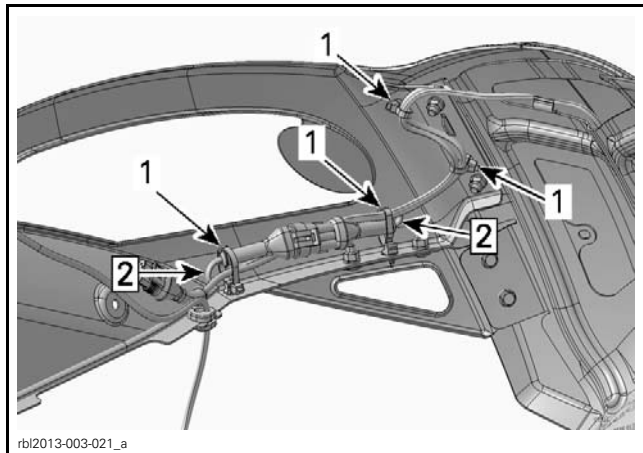


1. Locking ties
 2. Locking ties in a loop

6. Put fender in position and install two M6 x 20 screws on each side.

NOTE: Do not torque screws.

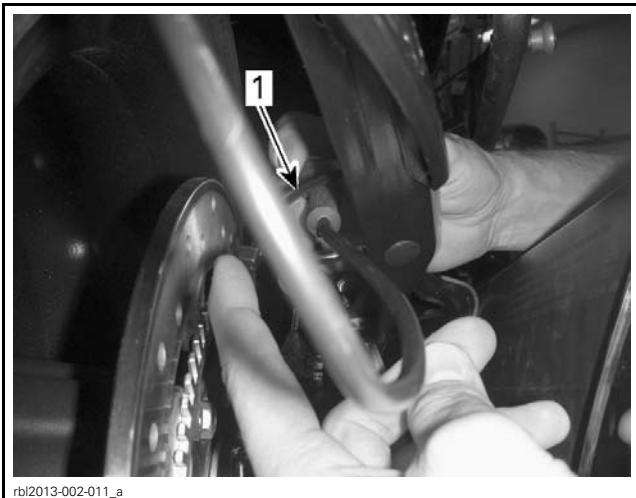


1. Locking tie

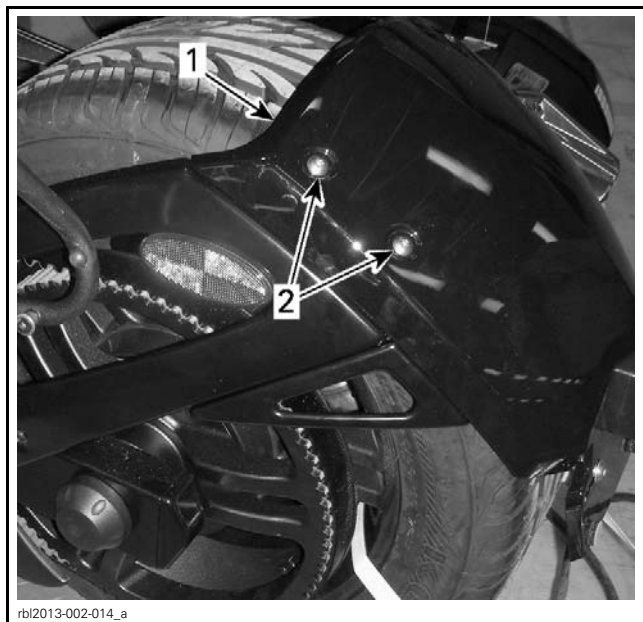

- TYPICAL
 1. Fender
 2. Screws


7. Install two screws and nuts on each side of fender reinforcement plate.

NOTE: Do not torque screws and nuts.

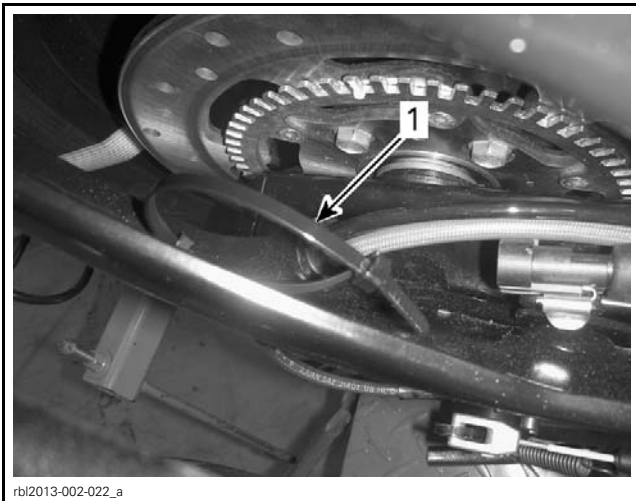

1. Locking tie

NOTE: For Australian models route the back-up light harness making a loop in the locking ties as shown.

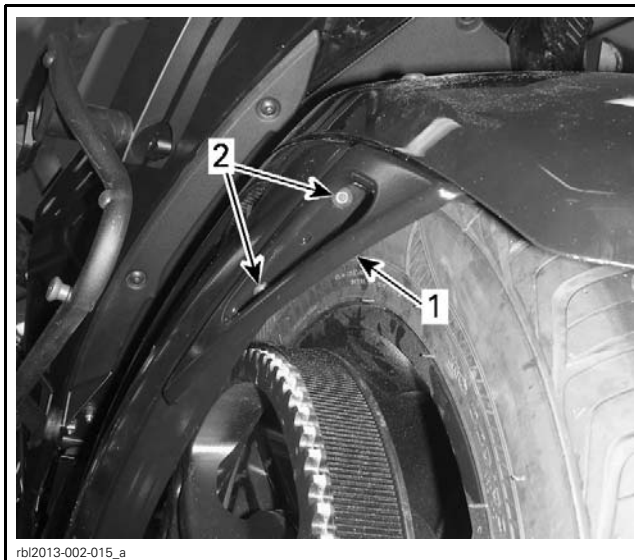


rbl2013-002-015_a


TYPICAL

1. Fender reinforcement plate
2. Screws and nuts

8. Torque screws and nuts according to the following tightening sequence:

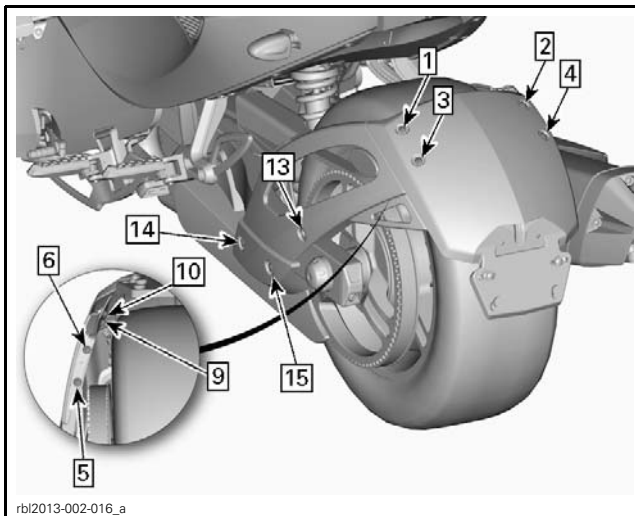

rbl2013-002-016_a

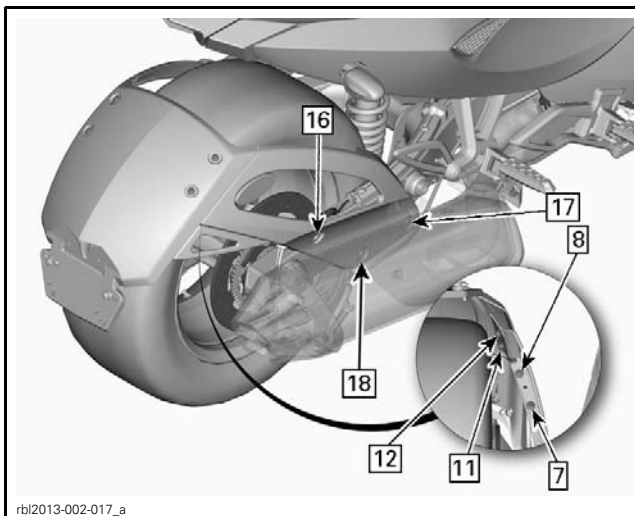TYPICAL

rbl2013-002-017_a


TYPICAL

PARTS	SPECIFIED TORQUE
Screws and nuts	7.5 N•m ± 0.5 N•m (66 lbf•in ± 4 lbf•in)

Antenna (LTD Model Only)

Remove label from antenna. Ensure that no label or glue residue is left on antenna.

Install antenna on RH rear side panel, near the back of the vehicle. Tighten by hand to a snug fit without using excessive force.

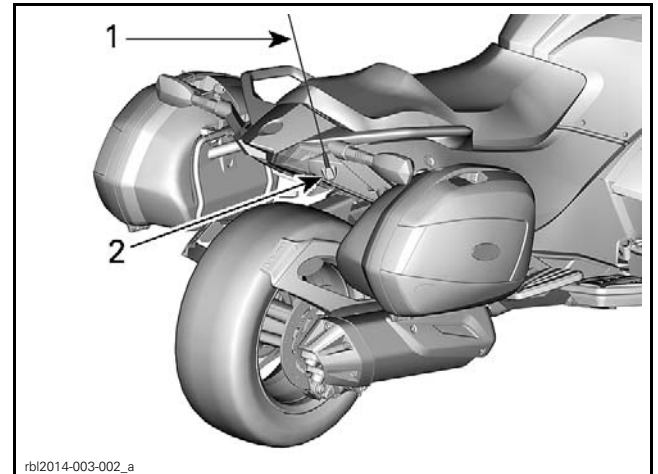

rbl2014-003-002_a

Hang Tag and Safety Labels

This vehicle comes with a hang tag and labels containing important safety information. The labels are considered permanent parts of the vehicle and should not be removed. Hang tag is to be removed by the owner only.

Any person who rides this vehicle should read and understand all the information given on hang tag and safety labels before riding.

Safety labels of several language can be chosen by customer, according to availability.

⚠ WARNING

The Spyder roadster is a different type of vehicle - it requires special skills and knowledge. Learn how the Spyder roadster is different.

Read the operator's guide (in the front storage compartment) and watch the safety video.

Complete a training course (if available), **practice**, become proficient with the controls, and get a proper license.

Refer to the Safety Card before riding.

Always wear a helmet and riding gear.

With this type of vehicle, riders are exposed to more road risks than in a car. Even skilled operators can be struck by other vehicles or lose control. This vehicle will not protect you in a crash.


Handling limits and road conditions

The Vehicle Stability System (VSS) cannot stop you from losing control, flipping over, or falling off if you exceed this vehicle's limits. Know the limits for different road conditions. Do not ride on ice, snow, or off road. Avoid puddles and running water. This type of vehicle can hydroplane on water and slip on gravel, dirt and sand covered roads. If you must go through these road conditions, slow down.

This hangtag may only be removed by the customer.

704904124

704904124

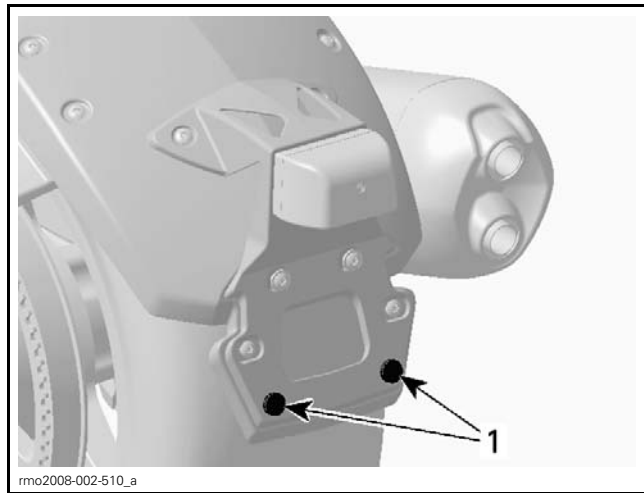

TYPICAL

1. Damping pads

4. Secure upper portion of license plate on vehicle plate support using existing hardware.
5. Squeeze license plate and support together at each lower corner.


Accessories Installation

1. Install accessories (if any) as per their installation instructions (included in each kit).
2. Install any other equipment required by law (if any).

Licence Plate Installation

NOTE: When a license plate needs to be installed or replaced, ensure to install two new damping pads (P/N 293 740 028) on plate to be installed.

1. Remove existing plate on vehicle (if applicable).
2. Peel off backing of new damping pads.

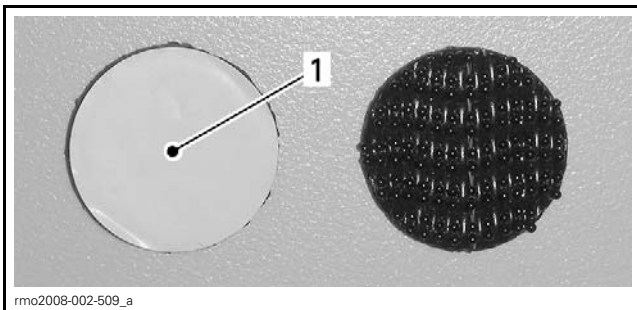

1. Damping pad backing

3. Position new damping pads over existing pads on vehicle plate support.

Vehicle Decals

1. Install decals on vehicle according to customer country language and local legislation.
2. Ensure that the new decals are installed at the same location and over the factory installed decals.

FLUIDS

General Guidelines

All fluids (except fuel) have already been filled at factory, it is only necessary to validate them. However, if refill is needed, refer to the appropriate *ROADSTER SHOP MANUAL* for the proper procedure.

Fuel


1. Add fuel in the fuel reservoir.



rmo2008-001-016

FUEL RESERVOIR

2. Fill the tank until the fuel level reaches the higher point of the filler tube.

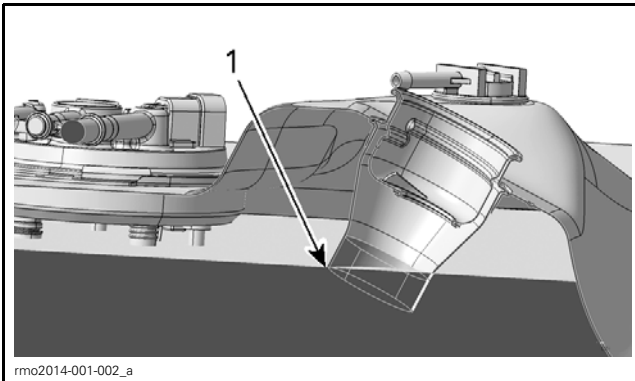

rmo2014-001-002_a

1. Higher point of the filler tube

Recommended Fuel

Use premium unleaded gasoline containing MAXIMUM 10% ethanol. The gasoline must have the following minimum octane requirements.

In Brazil, use regular unleaded gasoline containing MAXIMUM 25% ethanol.

Use premium unleaded gasoline with an AKI (RON+MON)/2 octane rating of 91, or an RON octane rating of 95.

NOTICE Never experiment with other fuels. Engine or fuel system damages may occur with the use of an inadequate fuel.

Inside North America Only

NOTICE Do NOT use fuel from fuel pumps labeled E85.

Use of fuel labeled E15 is prohibited by U.S. EPA Regulations.

⚠ WARNING

Never top off the fuel tank before placing the vehicle in a warm area. As temperature increases, fuel expands and may overflow. Fuel is flammable and explosive under certain conditions. Always wipe off any fuel or oil spillage from the vehicle.

NOTICE Never experiment with other fuels. Engine or fuel system damages may occur with the use of an inadequate fuel.

Clutch Fluid (SM5 Model)

Recommended Clutch Fluid

Use DOT 4 brake fluid from a sealed container. An opened container may be contaminated or may have absorbed moisture from the air.

Clutch Fluid Level Verification

The clutch fluid reservoir is near the reverse button on the left handlebar.

Check the clutch fluid level as follows:

1. Park the vehicle on a firm, level surface.
2. Set the handlebar straight in order to position the top of clutch fluid reservoir horizontally.
3. Wipe clean the cap area.
4. Use the Phillips head screwdriver located in the toolkit.
5. Unscrew cap retaining screws.




rmo2010-001-005

TYPICAL

6. Carefully remove cap. Pay attention not to drop the cap seal.
7. Look inside the reservoir to see the fluid level.

Check clutch fluid level inside the reservoir:
 – The fluid must be flush to the fill level line (protuberance on the reservoir wall).

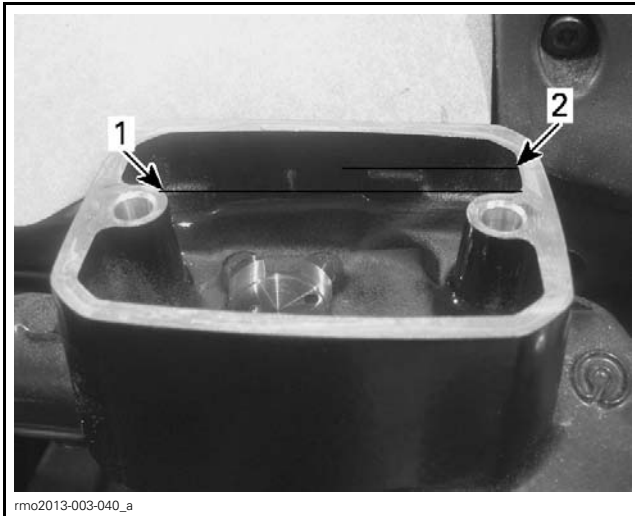

rmo2013-003-040_a
 FLUID REMOVED FOR CLARITY PURPOSE

1. Minimum
2. Maximum

8. Add recommended fluid as required. Do not overfill.

⚠ WARNING

Avoid getting brake fluid on skin or in eyes — it may cause severe burns. In case of contact with the skin, wash thoroughly. In case of contact with the eyes, immediately rinse with plenty of water for at least 10 minutes and then consult a doctor immediately.

NOTICE Immediately wipe up spills if necessary.

9. Ensure that the seal located inside the cap is collapsed.
10. Reinstall the cap on the reservoir.
11. Tighten cap screws.
12. Wipe off reservoir if necessary.

Engine Coolant

⚠ WARNING

When opening the reservoir, the coolant can be very hot and spray out if the engine is hot. In order to avoid getting burned, check coolant level when engine is cold.


Recommended Coolant

The cooling system must be filled with distilled water and antifreeze solution (50% distilled water, 50% antifreeze).

For best performance, use LONG LIFE ANTIFREEZE (P/N 219 702 685).


Coolant Level Verification

1. Park vehicle on a firm level surface.
2. Pull out the service cover with both hands.
3. Check the coolant level on the right hand side. Coolant must be visible slightly above the COLD. level mark.

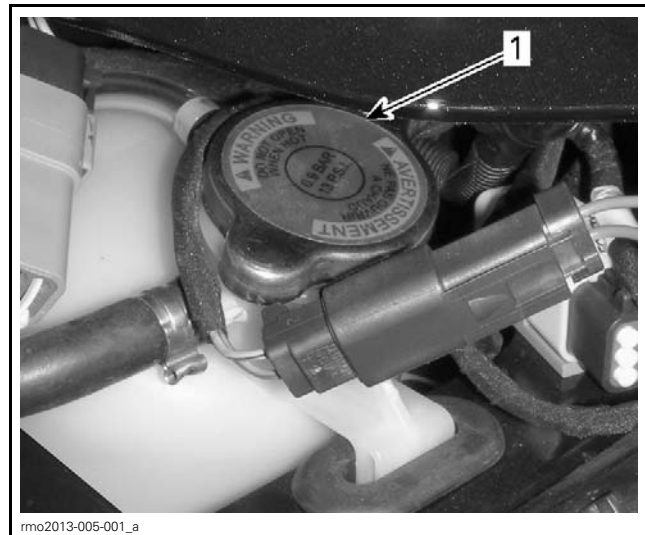

rmo2013-005-001_a
 1. Coolant reservoir cap

4. If required, add coolant until it is visible in the reservoir slightly above the COLD level mark. Use a funnel to avoid spillage. Do not overfill.
5. Stop adding coolant once coolant starts to appear in the tube.

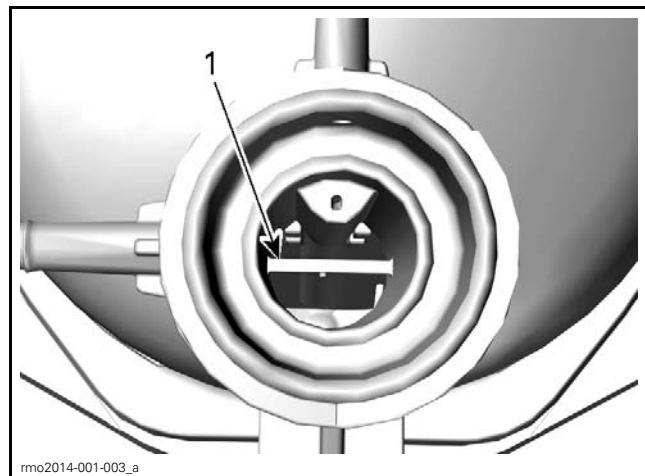

rmo2014-001-003_a
 1. Coolant level reference line (HOT)

6. Reinstall the service cover.

Brake Fluid

⚠ WARNING

Avoid contact of brake fluid with skin or eyes because it may cause severe burns. In case of contact with the skin, wash thoroughly. In case of contact with the eyes, immediately rinse with plenty of water for at least 10 minutes and then consult a doctor immediately.

NOTICE Do not overfill brake fluid reservoir.

Recommended Fluid

Use only DOT 4 brake fluid from a sealed container. An opened container may be contaminated or may have absorbed moisture from the air.

NOTICE To avoid serious damage to the braking system, do not use non-recommended fluids. Brake fluid can damage plastic and painted surface. Handle with care.


Brake Fluid Level Verification

1. Park vehicle on a firm level surface.
2. Unlatch and lift the seat.
3. Remove reservoir caps.




1. Brake fluid reservoir caps

4. Check brake fluid level in both reservoirs, near the back of the seat.
5. Ensure that fluid is above the MIN. mark.

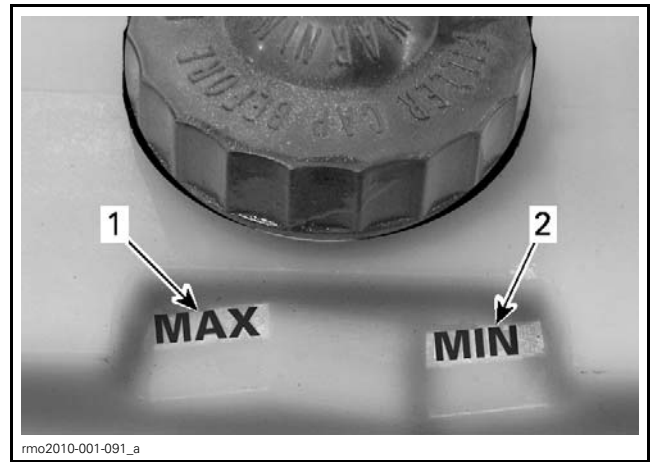

1. Brake fluid MAX. level mark
2. Brake fluid MIN. level mark

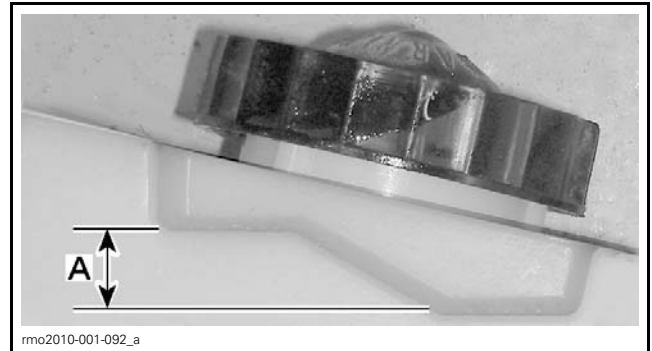

A. Operating range


6. If necessary, add recommended brake fluid.

⚠ WARNING

Clean filler cap before removing. Use only DOT 4 brake fluid from a sealed container.


NOTICE Brake fluid can damage painted surfaces or plastic parts. Immediately wipe off any spill.

7. Prior to installing brake fluid reservoir caps:
 - Check that V slit is in good condition.
 - Ensure diaphragm are properly positioned.

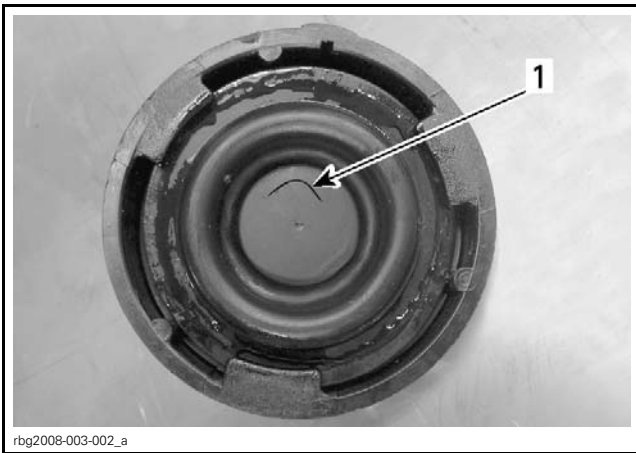

rbg2008-003-002_a

TYPICAL
1. V slit

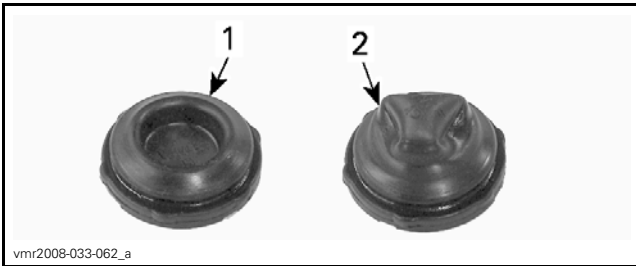

vmr2008-033-062_a

TYPICAL
1. Correct position
2. Wrong position

8. Reinstall both reservoir caps.
9. Close seat and ensure it is fully latched.

Engine Oil

NOTICE The procedures for checking the Spyder roadster oil level and replacing oil are different from most of the motor vehicles today. Properly follow instructions provided in this section.

Recommended Engine Oil

NOTE: For SM5 models, the same oil lubricates the engine, the gearbox and the clutch.

NOTE: For SE5 models, the same oil lubricates the engine, the gearbox, the clutch and the HCM (hydraulic control module).

Use XPS 4-STROKE SYNTH. BLEND OIL (SUMMER) (P/N 293 600 121).

If not available, use a 5W40 semi-synthetic (minimum) or synthetic **motorcycle oil** meeting the requirements for API service SL, SJ, SH or SG classification. Always check the API service label on the oil container.


NOTICE To avoid damaging the clutch, do not use a motor oil meeting the API service SM or ILSAC GF-4 classification. Clutch slippage will occur. Motorcycle oils designed for use with a wet-clutch are the best alternative.

NOTICE Do not add any oil additives to the recommended oil. This may lead to gearbox and clutch malfunctions.

Vehicle Preparation for Engine Oil Level Verification

NOTICE The Spyder roadster has a dry sump type lubrication system. To obtain a precise reading of the engine oil level, you must follow this procedure.

1. Park vehicle on a level surface.
2. Remove LH middle side panel.

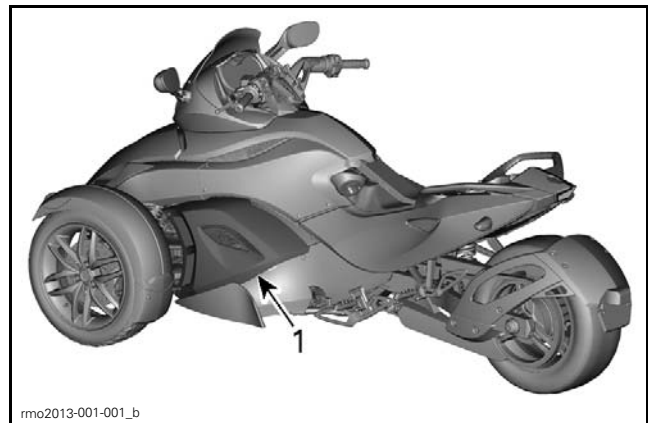

rmo2013-001-001_b

TYPICAL
1. Middle side panel


- 2.1 Unscrew 3 clips.



rmo2008-001-032_a

1. Middle side panel clips

- 2.2 Press down panel top edge with both hands and pull out

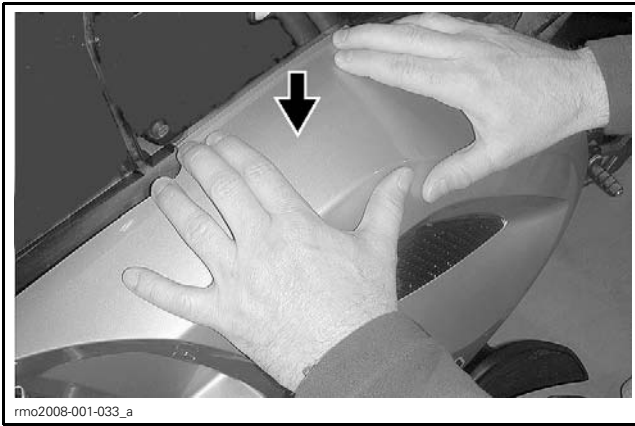

2.3 Remove middle side panel from vehicle by lifting it.

Oil Level Verification Procedure

⚠ WARNING

Before starting vehicle ensure vehicle in a well ventilated area or is outside. Smoke will come from the engine for 10 minutes as the anti corrosion coating on the exhaust system and engine burns off.


NOTICE For an accurate oil level reading, it is necessary to ride vehicle for 5–7 minutes to ensure that the engine is at its operating temperature. If oil level is verified when vehicle is not at operating temperature, oil level must be between lower and upper marks on dipstick.

NOTICE Never add oil in the engine if the verification is performed when the engine is cold.

1. With the engine already at normal operating temperature, start engine and let it run for at least 30 seconds.


NOTE: Running engine for at least 30 seconds allows the suction oil pump to drain the oil from the engine crankcase back into the oil tank. Not carrying out this step could result in overfilling the engine oil.

- 2. Stop engine.
- 3. Unscrew and remove oil dipstick.

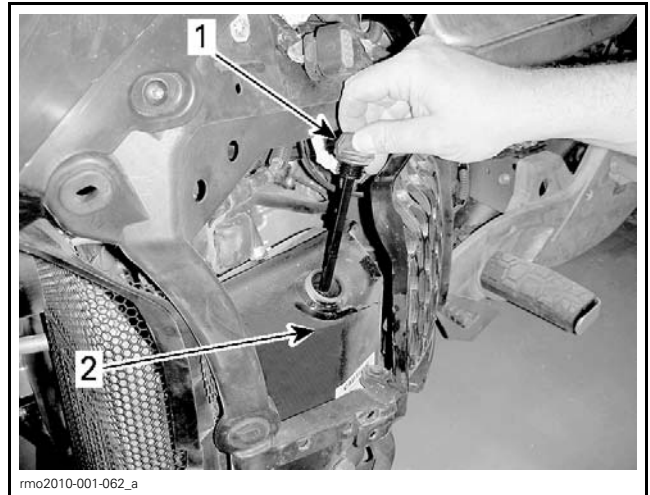

TYPICAL
1. Oil dipstick

- 4. Wipe off the dipstick.
- 5. Reinsert and **completely** screw in the dipstick to assure an accurate reading.
- 6. Unscrew and remove dipstick again.
- 7. Check oil level on dipstick. It should be near or equal to the upper mark.

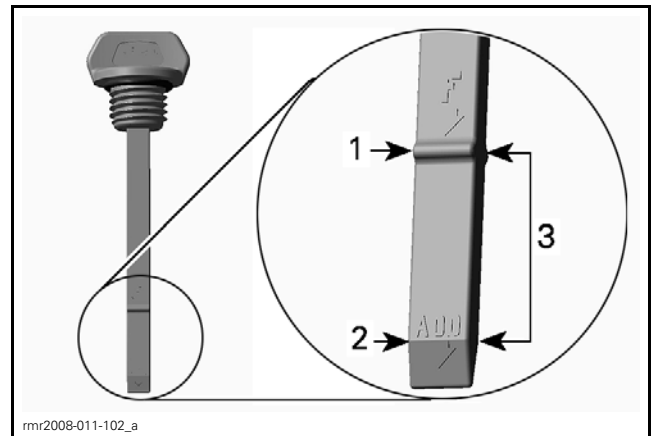

1. Upper mark (F)
2. Lower mark (add)
3. Operating range

If oil level is at or near upper mark:

- Do not add oil.
- Properly insert and tighten dipstick.
- Install the LH middle side panel.

If oil level adjustment is required:

- Adjust oil level until it is in the operating range, close to the upper mark. **Do not overfill.**
- Properly insert and tighten dipstick.
- Install the LH middle side panel.


NOTE: At the lower mark, 500 ml (.5 qt (U.S. liq.)) of oil is required to adjust level to upper mark (F).

Vehicle Parts Reinstallation

- 1. Wipe off any spilled oil.

2. Install LH middle panel.

- 2.1 Insert the middle side panel tabs into the bottom side panel slots.

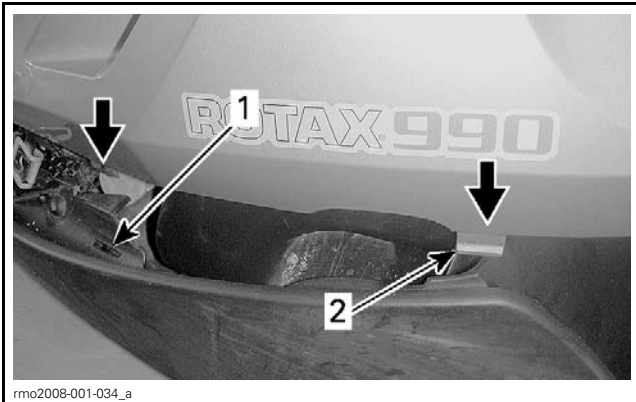

1. Bottom side panel slot
2. Middle side panel tab

- 2.2 Press down panel top edge with both hands and push in.
2.3 While pressing, ensure that lower tabs remain in slots while pressing



1. Press down top edge
2. Push top edge under top side panel edge

- 2.4 Secure panel by pushing and turning each clip clockwise (1/4 turn)



NOTE: Clip is properly fixed when a small amount of force is required while turning clip to its maximum rotation. Clip is not properly fixed when it is loose while turning.

SETUP

Guidelines

All adjustments have already been performed at factory. It is only necessary to validate them. However, if readjustment is needed, refer to the appropriate *ROADSTER SHOP MANUAL* for the proper procedure.

Tire Pressure

⚠ WARNING

Low pressure may cause tire to deflate and rotate on wheel. Overpressure may burst the tire. Always follow recommended pressure.

NOTICE Always check pressure when tires are cold before using the vehicle.

NOTE: Tire pressure changes with temperature and altitude. Recheck pressure if one of these conditions has changed (e.g., significant weather change, driving in the mountains).

Inflate tires to the specified air pressure. Refer to the following table.

COLD TIRE PRESSURE RECOMMENDATION	
FRONT	REAR
103 kPa ± 14 kPa (15 PSI ± 2 PSI)	193 kPa ± 14 kPa (28 PSI ± 2 PSI)

NOTE: The pressure difference between the left and right side tire should not exceed 3.4 kPa (.5 PSI).

For your convenience, an electronic pressure gauge is supplied in the tool kit.

Drive Belt

NOTICE Always verify drive belt tension with all parts at room temperature and the rear wheel lifted off the ground.

1. Place vehicle on a level surface.

NOTE: The area must be protected against wind and must have a very low background noise.

2. Set transmission to NEUTRAL.
3. Lift rear of vehicle by the frame until rear wheel is off the ground.

NOTICE Do not lift under rear shock absorber. Always lift by the frame. Refer to illustration.



TYPICAL - LIFT BY THE FRAME



TYPICAL - SWING ARM ALIGNS WITH A SPOKE

4. To check the drive belt tension use the BELT TENSION METER (P/N 529 036 115).



5. Enter the following specifications to program the meter.

MASS	WIDTH	SPAN
8.4 g/m	28.0 mm/R	1028 mm



SONIC TENSION METER DISPLAY

NOTE: Refer to the manufacturer's instructions to set the informations into the device.

6. Turn rear wheel to align a wheel spoke with the swing arm.

7. Position the sensor behind the LH passenger footrest and hold the sonic tension meter sensor approximately 1 cm (1/2 in) from belt or closer without touching the belt.




SPYDER GS/RS

8. Tap the belt to make the belt vibrate and note the measurement.

9. Repeat step 8.

NOTE: The second value should be within $\pm 25N$. If not, repeat measurements until tolerance is met.

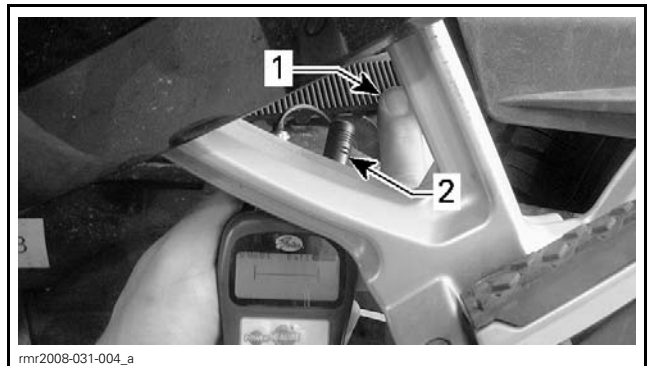

TYPICAL - SPYDER RS SHOWN

1. Tap the belt
2. Sonic tension meter sensor

10. Repeat steps 6 to 9 for the 2 remaining wheel spokes.

The average of the 3 obtained values (at the 3 spokes) must be within the following range:

**DRIVE BELT TENSION
(PARTS AT ROOM TEMPERATURE AND
REAR WHEEL LIFTED)**


1050N ± 150N

If the tension of drive belt is out of specification, adjust drive belt as per *DRIVE BELT TENSION ADJUSTMENT*. Refer to *DRIVE SYSTEM* subsection in the proper *CAN-AM ROADSTER SHOP MANUAL*.

Clutch Lever

NOTE: The distance between the clutch lever and handgrip can be adjusted from position 1 (greatest distance) to position 4 (smallest distance).

1. Adjust the clutch lever as per the owner's preference.
 - 1.1 Push the clutch lever forward to release the adjuster dial. Hold in position.
 - 1.2 Turn the adjuster dial to the desired position aligning the dial number with the dot on the lever.
 - 1.3 Release the clutch lever.

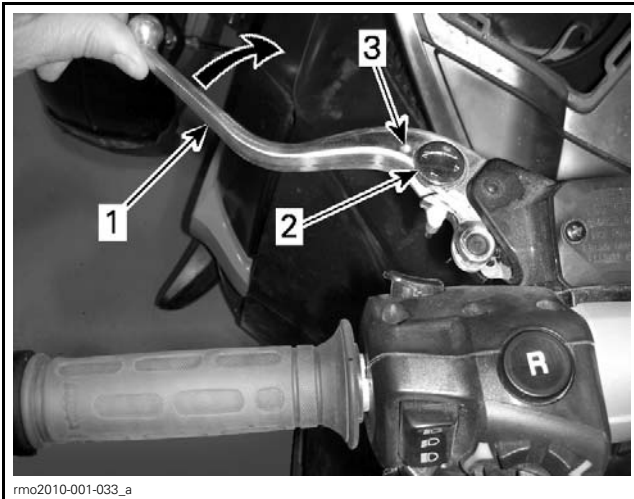

CLUTCH LEVER ADJUSTMENT

1. Clutch lever
2. Adjuster dial
3. Dot


Lights

Headlight Aiming Adjustment


North American Models

Position the vehicle 10 m (33 ft) in front of a test surface as shown.

Have a person of at least 91 kg (200 lb) taking place on the driver's seat.

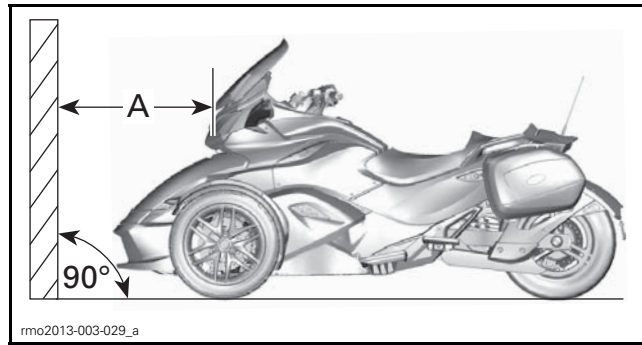

A. 10 m (33 ft)

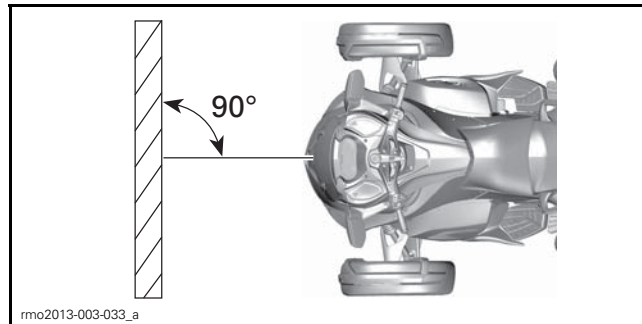


rmo2013-003-033_a

Trace 2 lines parallel to the ground on the test surface as follows:

LINES ON THE TEST SURFACE	
Line 2	704 mm (27-23/32 in) above ground
Line 3	794 mm (31-17/64 in) above ground

Select low beam.


Beam aiming is correct when the top) of headlight reflection is between marks.

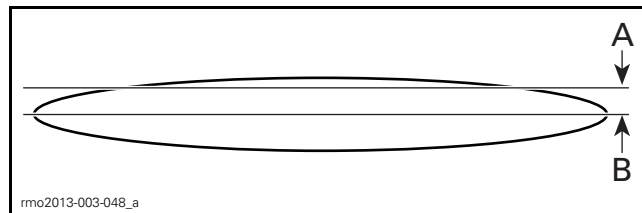

TYPICAL - HEADLIGHT REFLECTION ON TEST SURFACE

1. 704 mm (27-23/32 in)
2. 794 mm (31-17/64 in)

Each headlight can be adjusted by turning the adjustment screws located in the front of the lower console with a Phillips screwdriver. Adjust both headlights evenly.

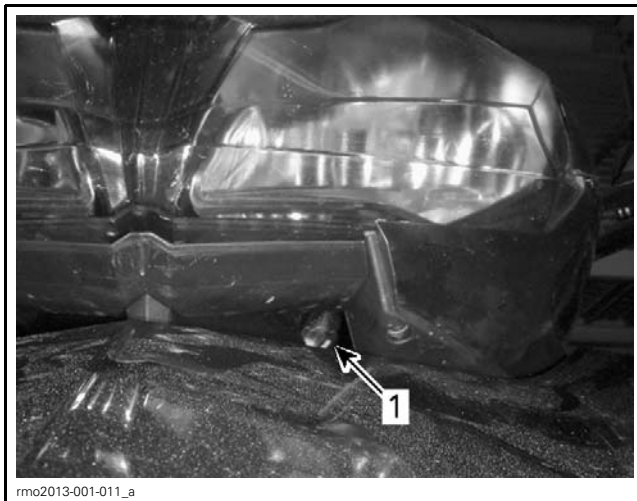


rmo2013-001-011_a
1. Adjustment screw


European Models

Position the vehicle 10 m (33 ft) in front of a test surface as shown.

Have a person of at least 91 kg (200 lb) taking place on the driver's seat.

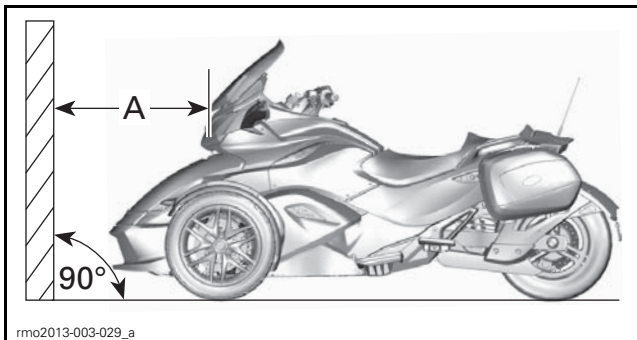

rmo2013-003-029_a
A. 91 kg (200 lb)

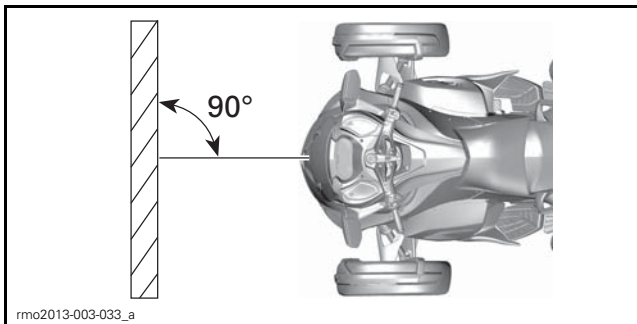


rmo2013-003-033_a

Trace 4 lines parallel to the ground on the test surface as follows:

LINES ON THE TEST SURFACE	
Line A	894 mm (36-13/64 in) above ground
Line B	804 mm (31-5/8 in) above ground
Line C	464 mm (18-9/32 in) above ground
Line D	374 mm (14-23/32 in) above ground

Select high beam.

Beam aiming is correct when the focus point (center point of ellipse) of headlight reflection is between upper marks.

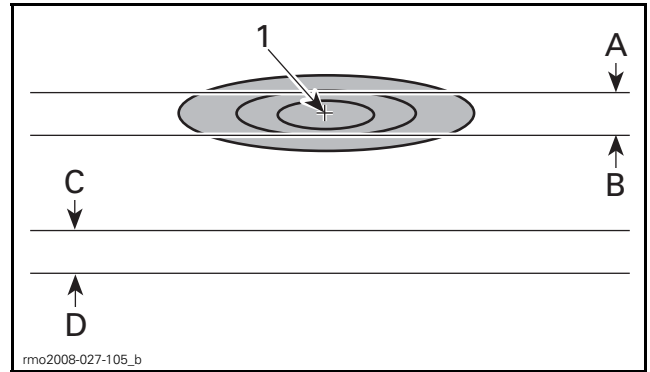


rmo2008-027-105_b
HEADLIGHT REFLECTION ON TEST SURFACE — HIGH BEAM
1. Focus point

- A. 894 mm (36-13/64 in) above ground
- B. 804 mm (31-5/8 in) above ground
- C. 464 mm (18-9/32 in) above ground
- D. 374 mm (14-23/32 in) above ground

Select low beam.

Beam aiming is correct when the focus point (brightest point) of headlight reflection is between lower marks.

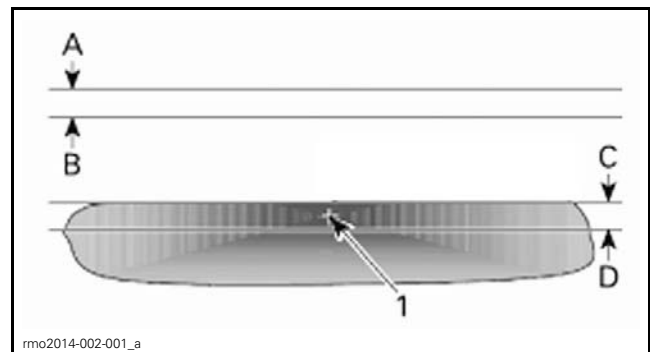


rmo2014-002-001_a
HEADLIGHT REFLECTION ON TEST SURFACE — LOW BEAM
1. Focus point

- A. 894 mm (36-13/64 in) above ground
- B. 804 mm (31-5/8 in) above ground
- C. 464 mm (18-9/32 in) above ground
- D. 374 mm (14-23/32 in) above ground

High Beam

Turn adjustment screws to adjust beam height. Adjust both headlights evenly.

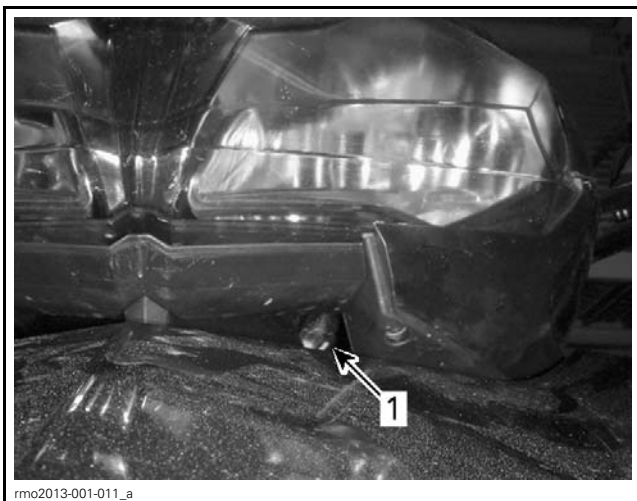


rmo2013-001-011_a

1. Adjustment screw

Low Beam

Insert a long Phillips screwdriver into air duct to reach the adjustment screws.

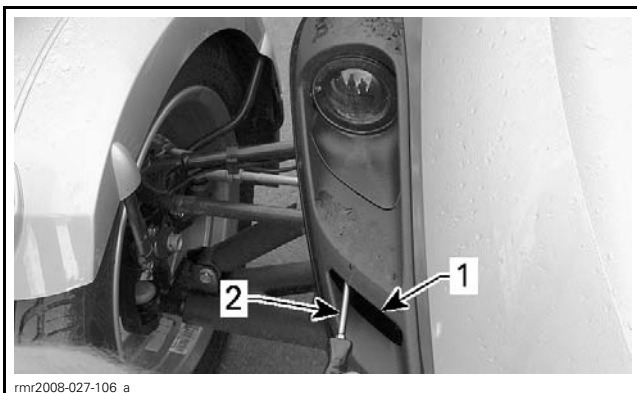

rmi2008-027-106_a

1. Air duct
2. Screwdriver

Turn adjustment screws to adjust beam height. Adjust both headlights evenly.

B.U.D.S. Programming




Always use the latest B.U.D.S. version on your shop computer. It is available from the following web site:

WWW.BOSSWEB.BRP.COM

Please note that the latest B.U.D.S. version is also available in Info Center.

NOTICE During data transfer, make sure that:

- Voltage (12V) remains stable before starting update. Charge the battery or use a power pack to ensure sufficient power reserve for the procedure.
- Although the screen may "freeze" for a while, B.U.D.S. continues to function in the background.
- Never disconnect any cable while updating the ECM.

MANDATORY TOOLS	
A personal computer (laptop or desktop)	
MPI-2 INTERFACE CARD (P/N 529 036 018)	
MPI-2 DIAGNOSTIC CABLE (P/N 710 000 851)	
OPTIONAL TOOL	
Extension cable available at electronic retail outlets. Do not exceed 7.5 m (25 ft)	


NOTE: B.U.D.S. can be used to program additional keys (included keys are ready to use).

Use B.U.D.S. to

- Enter Customer's Name
- Reset Trip Hours and Trip Distances
- Reset Last Service
- Set Speedometer Units
- Check fault codes (if any).

Connecting PC to Vehicle


1. Remove service cover from vehicle.
2. Connect the PC to vehicle. Refer to the latest edition of *CAN-AM ROADSTER B.U.D.S. SOFTWARE AND COMMUNICATION TOOLS* for the proper connecting procedure.
3. Press READ DATA button from the tool bar to initiate communication with the vehicle.

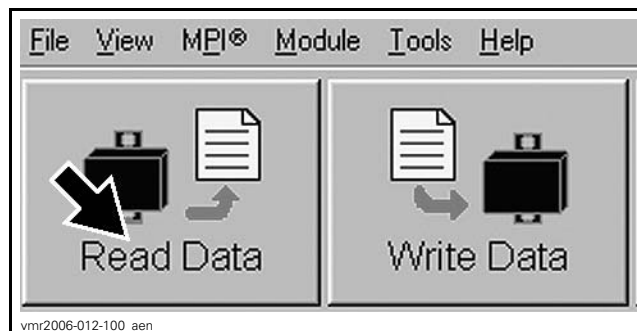

vmr2006-012-100_aen


Entering Customer's Name

1. Click on the VEHICLE tab to open the vehicle information page.

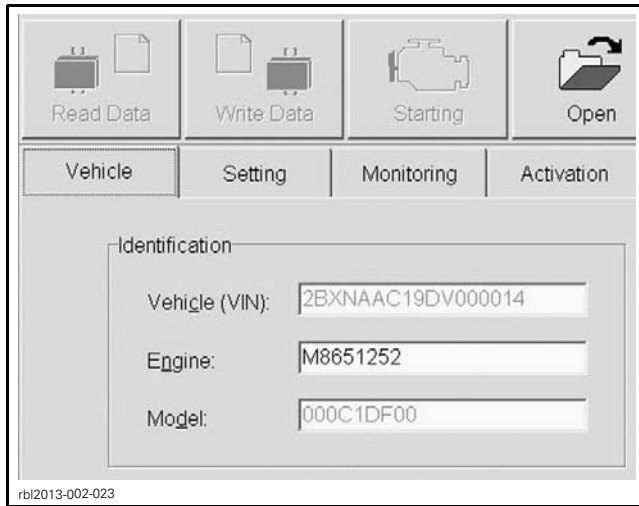

TYPICAL

2. Type the name of the customer.

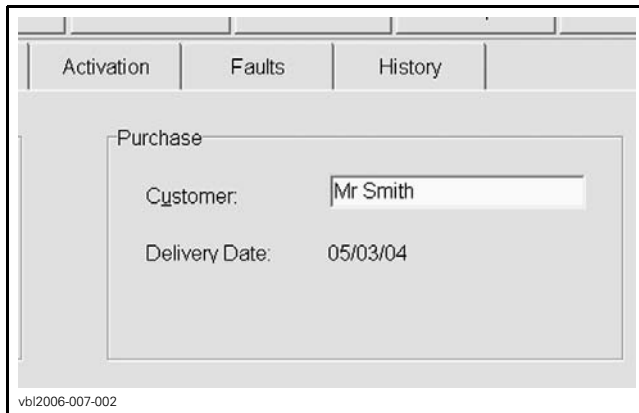


TYPICAL

3. Click on WRITE DATA to save the information in the vehicle ECM.

NOTE: After you are finished typing the name, B.U.D.S. automatically updates the Delivery Date on the screen.

Resetting Trip Hours and Trip Distances

1. Ensure that the VEHICLE tab is selected.
2. Click on the RESET TRIP buttons to reset the information.

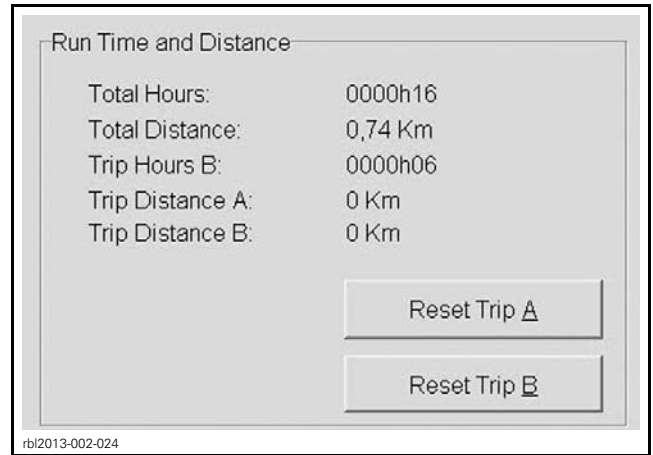


TYPICAL

NOTE: It can also be done directly on the info-center, using the selector button.

Resetting Last Service

1. Click on the RESET SERVICE button to reset the informations.

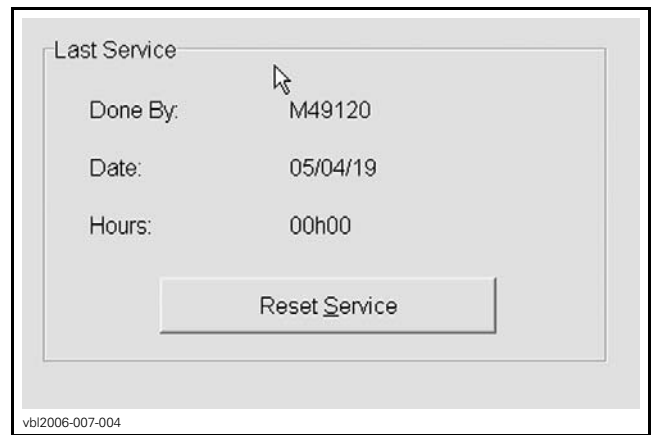

TYPICAL

NOTE: After each maintenance service, Last Service should be reset to keep a good track of vehicle service history.

Speedometer Units

NOTE: The speedometer is factory preset in miles but it is possible to change it to kilometer reading. Any unit modification is applied to the speedometer, odometer and trip meter.


1. Select the SETTING tab in B.U.D.S.
2. Select CLUSTER page.
3. Select **Metric** or **Imperial** from the **Cluster Units** section.

NOTE: No data will be lost when changing this setting.

Ending a B.U.D.S. Session

NOTICE After a problem has been solved, ensure to clear the fault(s). This will properly reset the appropriate counter(s).

1. Click on FAULT tab and check if there are active faults. If so, service vehicle then clear the faults in B.U.D.S
2. Click on WRITE DATA button to transfer new settings and information to the modules.

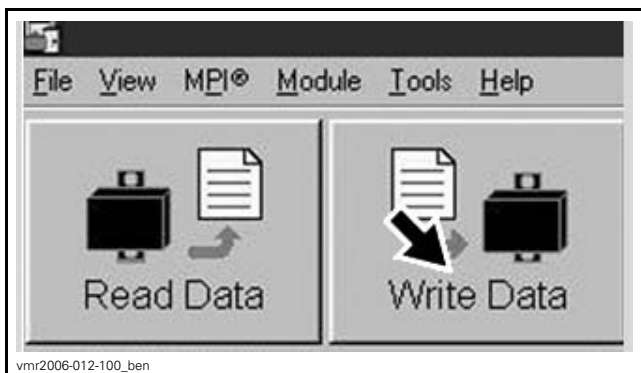


WRITE DATA BUTTON

3. Click on EXIT button (right most) to end session.
4. Reinstall DCL connector into its housing.
5. Reinstall service cover on vehicle.

Clock and Language Setting

NOTE: It is normal that the check engine indicator lamp is displayed while the clock is adjusted.

Use the RECC (Roadster Electronic Command Center) to control the display functions.

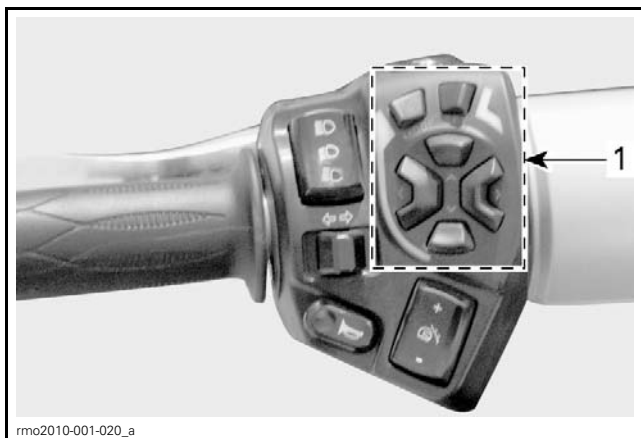


1. RECC

Pressing the MODE button will move a selection through the category icons, located at the top left area of the screen, in this order: Default riding screen, Audio, CB, Trip meter and Preferences.


Each press of the button will move the selection to the next available icon. When an icon is selected, its related screen will appear.

NOTE: The audio and CB icons are skipped when the vehicle is not equipped with these features. The Preferences screen is skipped when the vehicle is above 5 km/h (3 MPH), except for the SE5 model for the towing mode.

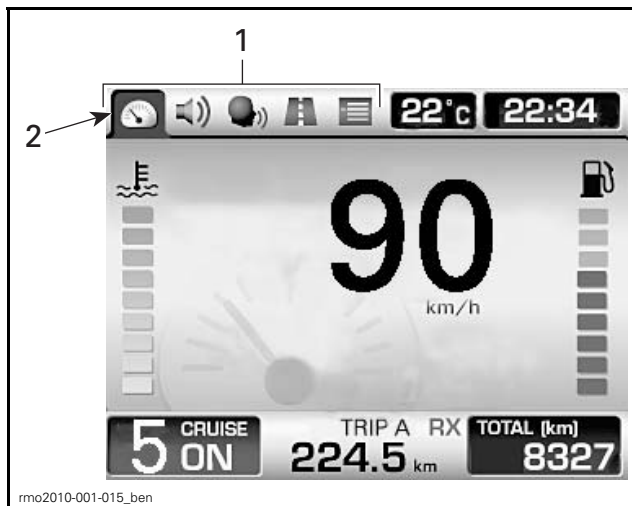

1. Category icons
2. Default riding icon selected

In the preferences screen, select the appropriate category.

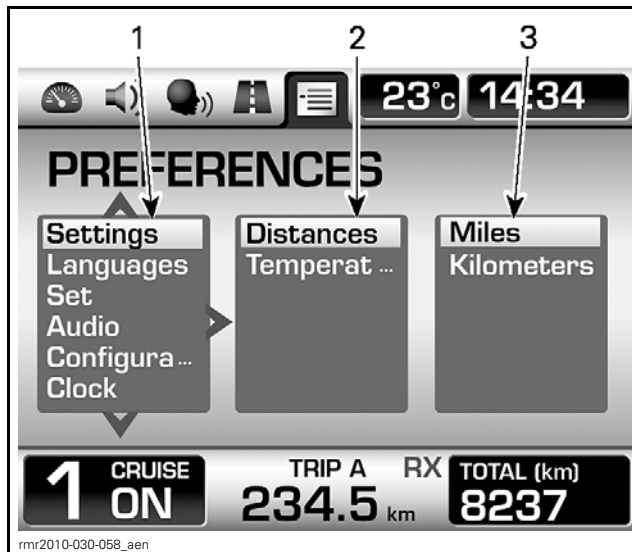

PREFERENCES SCREEN

1. 1st column: Main category
2. 2nd column: Secondary category or item
3. 3rd column: Unit or setting

Use the LEFT/RIGHT button to select the desired column.

Use the UP/DOWN button to move to the desired item in the column.

Use the RIGHT button to moved to the options column to the offered for that selection.


Use the UP/DOWN button to again to move to the desired item in that column.

NOTE: When an item is selected, the item is set as the current value. You may then navigate to any other screen and the item selected item will be kept.

Setting the Time

To set the hours:

Select CLOCK in main category of Preferences Screen.

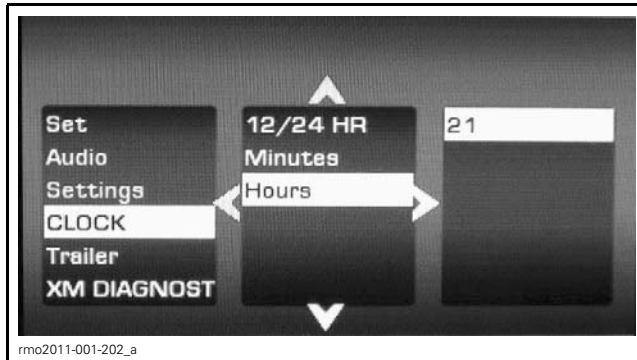


Select HOURS in secondary category.

Adjust the unit value using the UP and DOWN arrow.

To set the minutes:

Select CLOCK in main category of Preferences Screen.

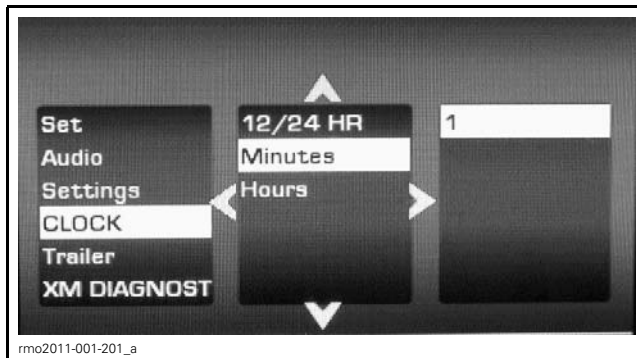


Select MINUTES in secondary category.

Adjust the unit value using the UP and DOWN arrow.

Selecting the Hour Mode

To select the 12/24 hour mode:

Select CLOCK in main category of Preferences Screen.

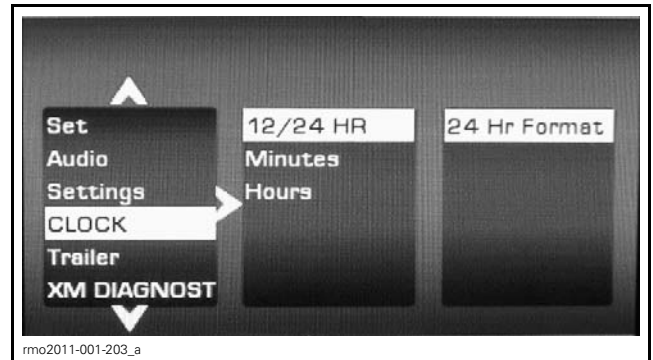

Select 12/24 HOUR in secondary category.

Select the appropriate value in main unit or setting.

Language Setting

In the preferences screen, choose:

- Languages
- Select the appropriate language from the available selections.

ASSEMBLY INSPECTION

Inspect the following parts to make sure that the vehicle is properly assembled.

NOTE: Ensure that all protective materials are removed from vehicle.

- Front compartment cover and seat locks
- Passenger grab handles
- Front wheel lug nut torque (must be 105 N•m (77 lbf•ft))
- Suspension arm ball joint cotter pins
- Tie rod end nuts and cotter pins
- Rear axle nut and cotter pin
- Gearshift pedal operation
- Parking brake pedal and cable operation
- Brake lines
- Foot pegs.

NOTE: Refer to the Predelivery Check List to confirm that all items are covered by your inspection.

FINAL INSPECTION

Vehicle Test Run

Ride the vehicle to ensure proper operation of all systems and components.

NOTE: It is normal for the shock absorbers to not provide their optimal performance during the first test ride. They will be set after a few suspension strokes.

1. Instrument cluster operation and indicator-warning pilot lamps functioning on power up.
2. Display of safety message in cluster.
3. Starter interlock mechanism operation.
 - 3.1 Press start button to make sure engine can not be started if M button is not depressed to acknowledge safety message.
4. Cluster mode button and set button operation.
5. Check for error messages in cluster and correct if necessary.
6. Verify that both ignition keys allow the engine to start.
7. Brake operation.
 - The brake pedal is in front of the right footpeg.
 - Press it down to operate.
 - This pedal brakes all three wheels.
 - 7.1 Ensure brake pedal is firm when pressure is applied and that it returns freely.
8. Parking brake operation.
 - The parking brake pedal is behind the operator's left footpeg. This pedal brakes only the rear wheel.
 - 8.1 Press it down firmly until it locks to apply the parking brake.
 - 8.2 Firmly press the pedal down a second time to release the parking brake.
 - 8.3 Ensure parking brake is shut-off.
9. Reverse button operation (SE5 Model).
 - 9.1 Start engine.
 - 9.2 Shift transmission to first gear, slightly apply throttle then release.
 - 9.3 Shift transmission to reverse, slightly apply throttle then release.
 - 9.4 Shift transmission to neutral position, slightly apply throttle then release.
10. Reverse interlock operation (SM5 Model).
 - 10.1 With the engine running, attempt to shift into reverse without pulling the reverse interlock lever back.
 - 10.2 Release the clutch lever.

- 10.3 If the transmission is allowed to shift to reverse, the reverse interlock will need to be adjusted.

11. Throttle operation.
 - The throttle is the right handgrip, it controls engine speed. To increase engine speed, roll the throttle toward you. To decrease engine speed, roll the throttle away from you. The throttle is spring loaded and should return to idle when released.
 - 11.1 With handlebars turned fully left and then fully right, ensure that the throttle returns completely to idle position.
12. Clutch lever operation (SM5 Model).
 - The clutch lever is in front of the left handgrip. The clutch controls the transmission of power from the engine to the rear wheel. The lever is squeezed to disengage power and released to engage power.
13. Engine stop switch operation.
 - The engine stop switch is near the right handgrip. It has two positions and must be set to the run position before you can start the engine. It allows you to stop the engine anytime without removing your hand from the handlebar.
14. Operation of the following lights:
 - Headlights
 - Taillights
 - Brake light
 - Position lights
 - Turn signals
 - Hazard lights
 - Licence plate light.
 - Auxiliary lights (option package, except CE models).
15. Dimmer switch operation.
16. Horn operation.
 - The horn button is located near the left handgrip.
17. Leakage of the following fluids:
 - Fuel
 - Engine oil
 - Engine coolant
 - Brake fluid
 - Clutch fluid

Vehicle Cleaning

To clean the vehicle, **do not use high-pressure washers** (like the ones found in car washes) as they may damage certain parts of the vehicle.

NOTICE Do not clean the windshield with alkaline or acid cleaner, gasoline or solvent to avoid windshield damage.

NOTICE For Matt finishes, do not use wax, detail spray, or other products used on regular paint. Do not wash with abrasive materials. Do not use mechanical cleaners or polishers, and do not rub the surfaces vigorously.

To clean the vehicle:

1. Rinse the vehicle thoroughly with water to remove loose dirt.
2. Using a soft, clean cloth, wash the vehicle with water mixed with a mild detergent, such as soap specially formulated for motorcycles or automobiles.

NOTE: Using warm water works well to remove bugs in the windshield and front panels.

NOTE: For **Matt finishes**, hand-wash with a soft wash mitt and a mild cleaning product safe for matt paint. To remove foreign substances such as insects, use a soft applicator and a mild solvent. Saturate and soak area before cleaning. Rub lightly.

3. While washing the vehicle, check for grease or oil. You can use XPS ROADSTER WASH (P/N 219 701 703) or a mild automotive degreaser. Thoroughly follow the manufacturer's instructions.
4. Dry the vehicle with a chamois or a soft towel.

NOTE: Vehicles with a matt paint finish may require more frequent cleaning.

Delivery to Customer

1. Complete the *PREDELIVERY CHECK LIST*.
2. Give *OPERATOR'S GUIDE* and *SAFETY DVD* to customer.

The customer and dealer must read and sign the *PREDELIVERY CHECK LIST*.

Hang tag is to be removed by the owner only.

Any person who rides this vehicle should read and understand all the information given on hang tag and safety labels before riding.